

Air Ride Kit Installation Schematic Pro Plus



When voltage of your vehicle is lower than 12.7v(+), the compressor is unable to start. Please start the car till voltage is high enough to start the compressor.

