

DOWNLOAD THE LATEST INSTALL MANUALS AT www.bddiesel.com





Installation Instructions

This kit is designed for V3 Flomax pumps only



PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION.

Kit Contents

1050340-PFF					
P551315	1500368	1500371	1500369		
A Donaldson, A Base of a Base o					
	Filter Head Adapter (yellow zinc plated)	Bolt 1/4" X 3.5"L			
	Qty: 1	Qty: 2			
	1500370				
	0				
Fuel Filter 3 mic	Oring -021		Filter Head		
Qty: 1	Qty: 1		Qty: 1		


1050340-WSP					
P550550	1500363	1500371	1500369		
Donakisen Ritter P550550					
	Adapter (Clear Zinc Plated)	Bolt 1/4" X 3.5"	3		
	Qty: 1	Qty: 2			
	1500370				
	0				
Fuel Filter (water separator) 20 mic	Oring -021		Filter Head		
Qty: 1	Qty: 1		Qty: 1		

Required Tools

- 3/16" Allen wrench
- 5/16" Socket
- 7/8" Combination wrench

- 1" Combination wrench
- Hose Cutter
- Utility Knife



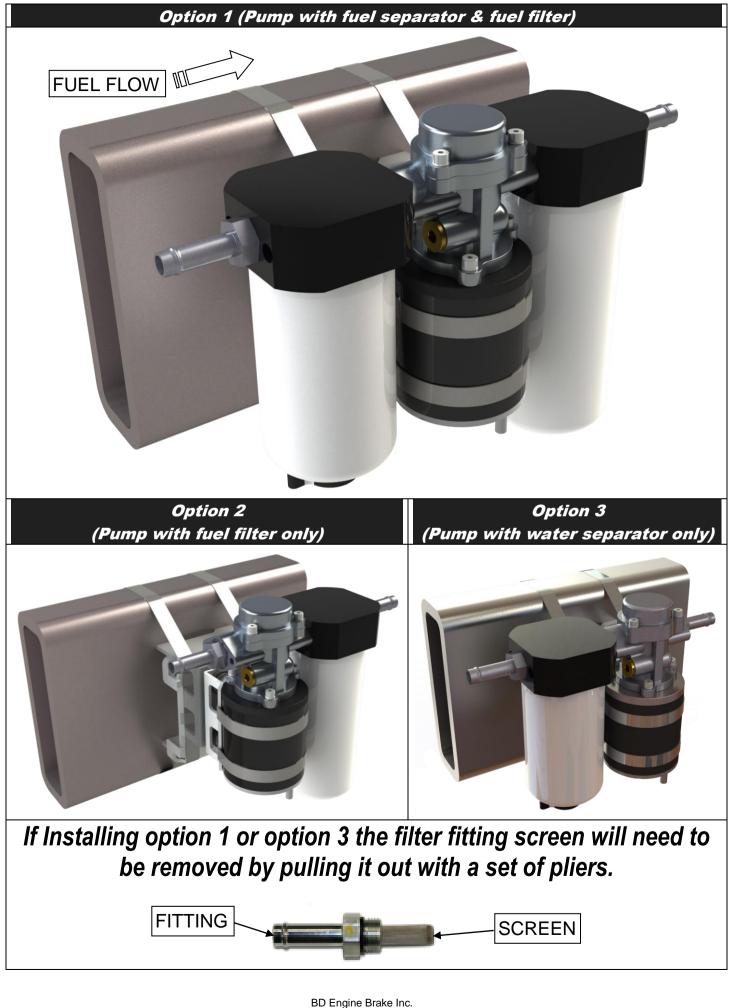


Installation

Pre-installation: If the flowmax pump is already mounted on the vehicle you will need to remove the barbed fittings before installing the filter head(s) to the pump. If the pump is not already mounted it may be preferred to assemble the filter head(s), Filter(s) and fitting(s) to the pump before mounting the assembly to the vehicle.

STEP 1 (SEE PAGE 3 FOR MOUNTING OPTIONS)


- Option 1: With the Flomax pump already mounted on the vehicle with the band straps. Place orings into the orings groove and bolt on the filter heads (x2) to the pump using the supplied hardware and torque to 89 inch/pounds.
- Option 2: With the Flomax pump already mounted on the vehicle with the band straps. Bolt on the filter head (x1) onto the (OUT) side of the pump using the supplied hardware and torque to 89 inch/pounds.
- Option 3: With the Flomax pump already mounted on the vehicle with the band straps. Bolt on the filter head (x1) onto the (IN) side of the pump using the supplied hardware and torque to 89 inch/pounds.

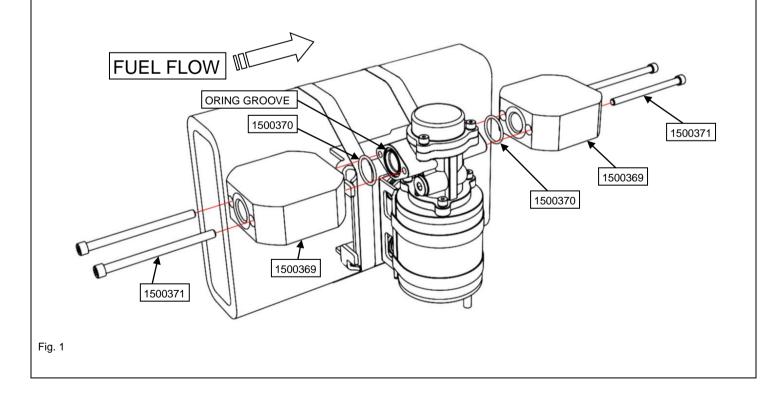

STEP 2

- *Option 1*: Apply Blue thread lock onto both adapters and insert the yellow zinc plated adapter into the filter head for the fuel filter. The other adapter threads into the filter head for the water separator. Insert barbed fittings into both filter heads.
- Option 2: Apply Blue thread lock onto the supplied adapter and insert into the filter head for the fuel filter. Insert barbed fitting(s) into filter head and pump.
- Option 3: Apply Blue thread lock onto the supplied adapter and insert into the water separator filter head. Insert barbed fitting(s) into filter head and pump.

NOTE: Use the supplied blue thread lock on the adapter(s) filter head side only, so they do not fall out with the next filter change.

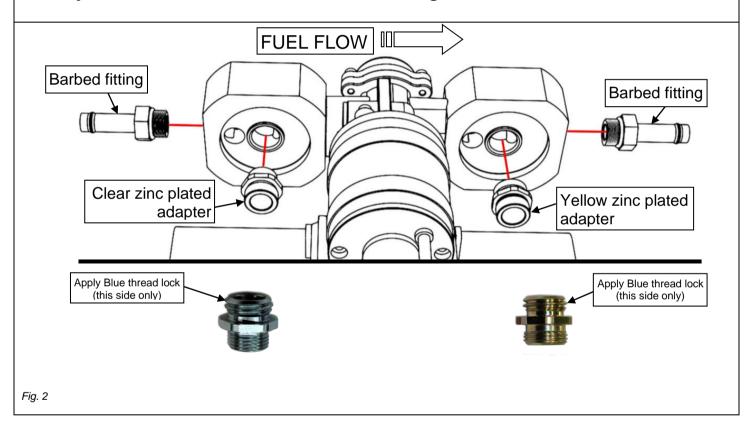

STEP 3

(PREFILL BOTH FILTERS WITH CLEAN FUEL BEFORE INSTALLATION)

- *Option 1*: Lube the seals and spin on the water separator and the Fuel filter 2/3 to 3/4 of a turn once the seal touches.
- *Option 2*: Lube the seal and spin on the Fuel filter 2/3 to 3/4 of a turn once the seal touches.
- *Option 3*: Lube the seal and spin on the water separator 2/3 to 3/4 of a turn once the seal touches.

