


SEAT COVERS
BY

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

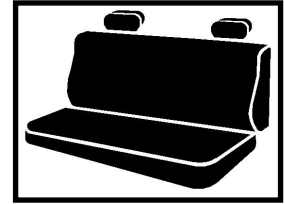


FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR
NP92-10 / Oe32-10 / SL62-10 / SP82-10/ TR42-10/ TRS42-10

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

The **Super Grip Buckles** are self-locking. For proper usage, see diagram (A) below.


DIAGRAM (A)

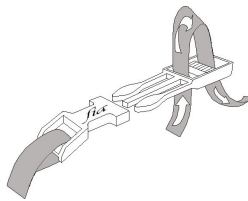

BACKREST COVER:

1. Remove headrest (see diagram B):
 - a) insert paper clip into holes at base of headrest to release holding clips
 - b) lift off headrest (**if unable to remove headrest consult your dealership**)
2. Unlatch seat cushion and hold in 3/4 upright position.
3. Slip cover over backrest.

DIAGRAM (B)

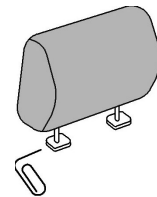

NOTE: WHEN INSTALLING BACKREST COVER ON SEAT WITH MIDDLE SHOULDER BELT STRAP, ENSURE THE SEAT COVER IS INSTALLED UNDER THE SEAT BELT STRAP ASSEMBLY.

4. Feed the back straps behind the seat so they go all the way down. Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. See diagram (C) and (D).
5. With seat cushion in down position reach through crevice where backrest and cushion meet. Bring straps forward and buckle at the front of the cover.
6. Push right bottom flap through crevice and hold at back of seat. With other hand, bring the side flap around and velcro to bottom flap. Repeat for opposite side. See diagram (E).
7. Adjust all velcro to equalize the tension for a uniform fit.


RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

DIAGRAM: C

D

 E



CUSHION COVER:

1. Centre cover on the seat.
2. Pull seat cover tightly side to side so that the front and back flaps tuck under seat.
3. Pass the front straps under the seat and buckle to back flap.
4. Pass side straps around the back of seat and buckle.
5. Adjust all straps/buckles and velcro to equalize tension for a uniform fit.

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone: (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.ca