

 
If you have any comments or concerns,  
 please feel free to contact our  
 customer service department at:  
 Toll-free: 1-800-835-0438  
 OR  
 Email: info@gofia.com

SEAT COVERS  
 BY



FEATURING  
**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

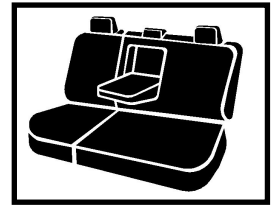

INSTALLATION INSTRUCTIONS  
 FOR

**NP92-85/ Oe32-85/ SL62-85/ SP82-85/ TR42-85/ TRS42-85**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER – 60 PORTION:**

- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1) Remove headrest (see note)</li> <li>2) Remove center seat belt buckle from elastic holder</li> <li>3) Detach all velcro on cover</li> <li>4) Slip cover over backrest. Ensure cover is installed under seat belt</li> <li>5) Position armrest through allowance in cover</li> <li>6) Close velcro to fit around top of center seat belt</li> <li>7) Drop straps behind the seat straight down</li> <li>8) Smooth cover tightly from top to bottom</li> <li>9) Tuck bottom flap on cover behind armrest and velcro</li> </ol> | <ol style="list-style-type: none"> <li>10) Holding cushion up in 3/4 position (steps 10, 11, 12), tuck cover through crevice</li> <li>11) Locate straps and secure to buckle on cover</li> <li>12) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note)</li> <li>13) Repeat on left side</li> <li>14) Place center buckle through elastic holder on cover</li> <li>15) Adjust all straps, buckles and velcro to equalize tension</li> </ol> |
|--|--|

**B) BACKREST COVER – 40 PORTION:**

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1) Remove headrest (see note)</li> <li>2) Slip cover over backrest</li> <li>3) Drop strap behind the seat straight down</li> <li>4) Smooth cover tightly from top to bottom</li> <li>5) Holding cushion up in 3/4 position (steps 5,6,7) tuck cover through crevice</li> </ol> | <ol style="list-style-type: none"> <li>6) Locate strap and secure to buckle on cover</li> <li>7) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note)</li> <li>8) Repeat on left side</li> <li>9) Adjust strap, buckles and velcro to equalize tension</li> </ol> |
|---|--|

**C) CUSHION COVER – 60 PORTION AND 40 PORTION:**

 
- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1) Center cover on the seat</li> <li>2) Tuck back flap and straps through crevice</li> <li>3) Lift seat and locate straps. Secure to buckle at front of cover</li> <li>4) <b>FOR 40 PORTION:</b> Locate velcro on side panel and apply on carpet under seat</li> </ol> | <ol style="list-style-type: none"> <li>5) <b>FOR 60 PORTION:</b> Locate velcro on both the side panel and center and apply on carpet under seat</li> <li>5) Adjust straps, buckles and velcro to equalize tension</li> </ol> |
|---|--|

**D) ARMREST COVER**

- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1) Fold down armrest</li> </ol> | <ol style="list-style-type: none"> <li>2) Slip cover over armrest and attach velcro</li> </ol> |
|--|--|

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

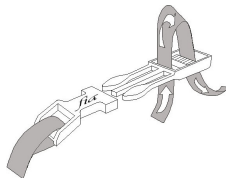


**3) RE-INSTALLATION OF HEADRESTS**


- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

 Push in side release buttons  
 - Lift off  
 (If unable to remove consult dealership)

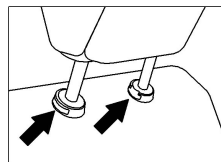

**4) BACKREST COVER BOTTOM FLAP INSTALLATION**

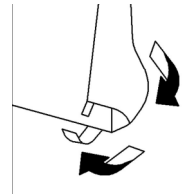 

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

