

THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)

SEAT COVERS
BY



If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR**

NP99-11/ OE39-11/ SL69-11/ SP89-11/ TR49-11/ TRS49-11

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER - "40" PORTION X 2:

- 1) Remove head rest (see note)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and full down firmly
- 4) Tuck flaps through crevice and attach to Velcro at back
- 5) Replace headrests (see note)

B) CUSHION COVER - "40" PORTION X 2:

- 1) Center cover on the seat
- 2) pass the front strap under seat and buckle to back flap
- 3) Pass side straps around back of seat
- 4) Buckle straps to back flap
- 5) Adjust straps and buckles to equalize tension

C) BACKREST COVER – CENTER "20" PORTION X 1

 
- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged
- 4) Position adhesive back Velcro, supplied, to align with the velcro on cover. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**

D) CUSHION COVER – CENTER "20" PORTION X 1

- 1) Open cushion lid to up position
- 2) Center the cover on the seat
- 3) Tuck the back part of cushion cover through seat crevice
- 4) Pass the side straps under back corners of seat and secure to the end buckles
- 5) Adjust straps/buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

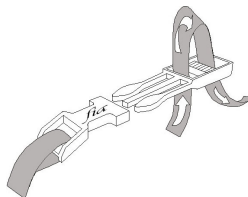

3) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

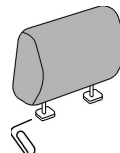

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

