 


If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia

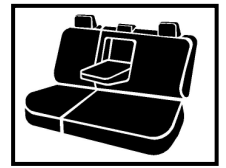

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-81/ OE32-81/ SL62-81/ SP82-81/ TR42-81/ TRS42-81

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER – 60 PORTION

- | | |
|--|--|
| 1) Move seat forward and remove headrests (see notes) | 6) Fold down backrest and bring both sides of cover around the back and close velcro on the bottom band of cover |
| 2) Detach velcro on top and bottom back band of cover | 7) Bring elastic with velcro from under the seat around the back and attach to bottom band carpeting on cover |
| 3) Slip cover over backrest under seat belt allowing armrest through cover | 8) Bring backrest to up position, adjust cover and velcro to equalize tension for a better fit. |
| 4) Close velcro to fit around center seat belt at top, align slits to headrests post base. | 9) Replace headrests (see note) |
| 5) Tuck in elastic with velcro on the bottom crevice | |

B) BACKREST COVER – 40 PORTION

- | | |
|---|---|
| 1) Move seat forward and remove headrests (see notes) | 5) Bring backrest to up position, adjust cover and velcro to equalize tension for a better fit. |
| 2) Slip cover over backrest | 6) Replace headrest (see note) |
| 3) Tuck in elastic with velcro on the bottom crevice | |
| 4) Fold down backrest and bring elastic/velcro from under seat around the back and attach to bottom band carpeting on cover | |

C) CUSHION COVERS


- | | |
|--|---|
| 1) Center cover on the seat, cover has allowance for seat belt buckle. | 4) Fold down backrest and pass side straps around the back and buckle |
| 2) Tuck the back part of the cover through the seat crevice | 5) Adjust all buckles and straps for a uniform fit |
| 3) Pass straps under the seat and buckle to front | |

D) ARMREST COVER

- | | |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|

NOTES:

 1) SELF-LOCKING SUPER-GRIP® BUCKLE:

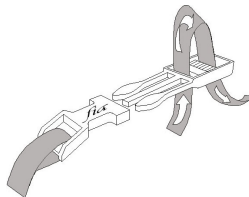


2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release
B) Lift off

OR

 - A) Push in side release buttons
B) Lift off
(If unable to remove consult dealership)

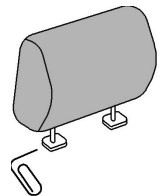

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com