

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

*fia*

FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

NP97-30/ Oe37-30/ SL67-30/ SP87-30/ TR47-30/ TRS47-30



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER – “40” PORTION X 2:**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. (see air bag warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

**B) CUSHION COVER – “40” PORTION X 2:**

- 1) Align cover on seat and position seat belt buckle through opening provided
- 2) Pass the back flap on the cover through the crevice
- 3) Pass the front strap under seat. Buckle to back flap
- 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 5) Adjust straps and buckles to equalize tension

**C) CUSHION COVER – “20” PORTION:**

- 1) Open cushion lid to up position
- 2) Slip cover over lid, pull side Velcro and attach
- 3) With cushion lid close, pass back flap through crevice
- 4) Open cushion lid to up position
- 5) Pull back flap and apply to carpet
- 5) Snug and adjust Velcro for better fit.

**D) BACKREST COVER – “20” PORTION**


- 1) Remove headrest (see note)
- 2) Open zipper
- 3) Place cover over backrest under seat belt, close zipper
- 4) Snug cover at back of storage compartment so the Velcro on the cover is positioned through the crevice where the lid and storage compartment are hinged
- 5) With armrest down, open storage compartment
- 6) Position adhesive backed velcro (supplied) on to inside storage compartment to align with the velcro tabs on cover and attach. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED**

**E) ARMREST / STORAGE COMPARTMENT LID COVER :**

- 1) Open armrest / storage compartment
- 2) Slip cover over lid

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

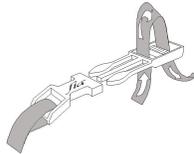

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

(If unable to remove consult dealership)

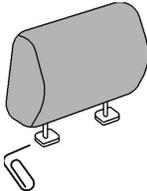

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

6-21-13