If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS





FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR

Oe38-12/ SL68-12/ TR48-12

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Remove head rest (see note)
- 2) Open zipper
- 3) Slip cover over backrest under seat belt
- 4) Close zipper (see note)

1) Center cover on the seat

A) BACKREST COVER

- 5) Tuck flaps under backrest and attach to Velcro at back
- 6) Adjust Velcro to equalize tension
- 7) Replace headrests (see note)

B) CUSHION COVER

- 3) Pass side straps around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

NOTES:

flap

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

2) Pass the front strap under seat and buckle to back



3) SEATS WITH SIDE ARMRESTS:

- Locate opening in stretch fabric
- Slip armrest through opening

4) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release
 - Lift off

OR

- B) Push in side release buttons
 - Lift off

(If unable to remove consult dealership)

5) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia