THIS COVER FITS A SEAT WITH A CENTER CUSHION COMPARTMENT. IF THE CENTER CUSHION DOES NOT OPEN, YOU HAVE THE WRONG SEAT COVER. (SEE PICTURE ABOVE)



If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com

FEATURING FEATURING SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

Leader in Custom Fit

INSTALLATION INSTRUCTIONS FOR

NP98-23/ OE38-23/ SL68-23/ SP88-23/ TR48-23/ TRS48-23

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – BUCKETS / "40" PORTION X 2:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest

1) Center cover on the seat

and the seat. Buckle to back flap

3) Tuck flaps under backrest and attach to Velcro at back

2) Pass the front strap under seat. Buckle to back flap

B) CUSHION COVER - BUCKETS / "40" PORTION X 2:

4) Adjust straps and buckles to equalize tension

4) Adjust Velcro to equalize tension

5) Replace headrests (see note)

C) BACKREST COVER – "20" PORTION:

Place the armrest in up position. Open lid on storage compartment
 Slip cover over armrest positioning elastic behind cup holder. Close lid.

3) Pass side straps through the opening between the molded plastic

3) Position adhesive velcro (supplied) to align with velcro on cover around the edge of cup holder. **NOTE: BEFORE POSITIONING**

VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.

4) Snug cover at back of armrest then place armrest/console in down position

5) Position Velcro sewn on back of cover through the crevice where lid and armrest are hinged

6) Open armrest/console lid

7) Position adhesive back velcro supplied to inside the storage compartment and align with velcro on the side and back of cover.

 
D) CUSHION/COMPARTMENT COVER- "20" PORTION:

2) Slip cover over lid, pull down firmly and velcro at bottom of cover

1) Open lid

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:




3) RE-INSTALLATION OF HEADRESTS

A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release - Lift off
 
<u>OR</u> B) - Push in side release buttons - Lift off (If unable to remove consult dealership)



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia