

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com



FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR
Oe39-14/ SL69-14/ SP89-14/ TR49-14

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER – “40” PORTION X 2:

- 1) Remove head rest (see note)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly
- 4) Tuck flaps through crevice and attach to Velcro at back
- 5) Replace headrests (see note)

B) CUSHION COVER - “40” PORTION X 2:

- 1) Center cover on the seat
- 2) Position seat belt buckle through opening provided
- 3) pass the front strap under seat and buckle to back flap
- 4) Pass side straps around back of seat and buckle to back flap
- 5) Adjust straps and buckles to equalize tension

C) BACKREST COVER – CENTER “20” PORTION X 1

 
- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged
- 4) Position adhesive back Velcro, supplied, to align with the velcro on cover. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**

D) CUSHION COVER – CENTER “20” PORTION X 1

- 1) Move “40” portion to most forward position
- 2) Align cover on seat and position seat belt through opening provided
- 3) Pass front straps under seat and buckle to back flap
- 4) Pass side strap around back of seat and buckle
- 5) adjust straps and buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

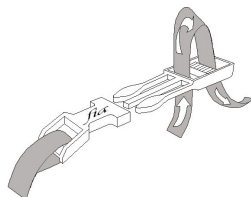


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

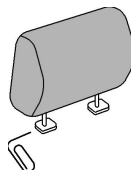

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
B) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

