

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

NP99-33/ OE39-33/ SL69-33/ SP89-33/ TR49-33/ TRS49-33



If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Unhook back flap of the seat by removing elastic from the plastic clip under the seat
- 2) Center seat cover on seat
- 3) Pass the front strap under the seat and attach to buckle on back flap

A) CUSHION COVER

- 4) Pass side straps through the opening between the molded plastic and the seat and attach to buckle on back flap
- 5) Adjust straps and buckles to equalize tension


- 1) Remove headrest (see note)
- 2) Slip cover over backrest and pull down firmly (**SEE AIR BAG WARNING BELOW**)
- 3) Pass attached velcro straps through crevice
- 4) Place velcro straps under the seat between cushion and metal frame and fasten together

B) BACKREST COVER

- 5) Re-install the elastic attached to the bottom back flap of the seat to the plastic hook under the seat
- 6) Place the elastic attached to seat cover to same hook

NOTES:

- 1) **SELF-LOCKING SUPER-GRIP® BUCKLE:**

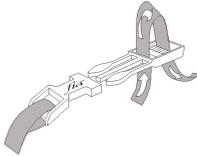

- 3) **RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com