

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia

FEATURING
SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

OE39-52/ SL69-52/ SP89-52/ TR49-52



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER

 
- 1) Remove headrests (see note)
- 2) Open velcro on the side seam to allow for fitting around armrest (driver side only)
- 3) Slip cover over backrest and pull down firmly (see air bag warning below)
- 4) Fasten side velcro
- 5) Tuck flaps through crevice and attached to velcro at back
- 6) Adjust all velcro to equalize tension
- 7) Replace headrests (see note)

B) CUSHION COVER

- 1) Center cushion cover on seat
- 2) Pass the front strap under the seat and buckle to the back flap of cover
- 3) Pass side strap on narrow side band through the opening between the molded plastic and the seat (door side) and buckle to back flap of cover
- 4) Bring other side strap under seat and buckle to the back flap of cover
- 5) Adjust straps and buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

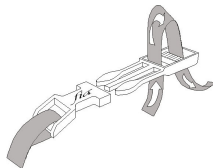


3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

2) HEAD REST REMOVAL:

 Push in side release buttons
- Lift off
(If unable to remove consult dealership)

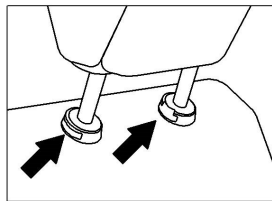

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY:

The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

2-10-15