

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com


SEAT COVERS
BY



FEATURING
SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS
FOR

 NP99-73/ OE39-73/ SL69-73/ SP89-73/ TR49-73/ TRS49-73

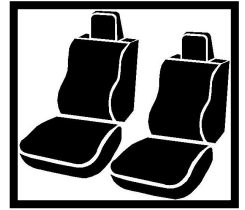

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVER – DRIVER SIDE

- | | |
|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1) Locate cushion cover with openings on both sides | 4) Pass the side straps under the back corner of the seat and secure to end buckle |
| 2) Position cover so the seat belt buckle goes in smaller hole and pump handle in larger opening | 5) Adjust the straps/buckles to equalize tension for a uniform fit |
| 3) Pass the front strap under seat and secure to center buckle | |

B) CUSHION COVER – PASSENGER SIDE


- | | |
|----------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1) Center cover on seat | 4) Pass the side straps under the back corner of the seat and secure to end buckle |
| 2) Position cover so the seat belt buckle goes in hole | 5) Adjust the straps/buckles to equalize tension for a uniform fit |
| 3) Pass the front strap under seat and secure to center buckle | |

C) BACKREST COVERS – DRIVER AND PASSENGER SIDES

- | | |
|------------------------------------------------------|----------------------------------------------------|
| 1) Remove headrests (see note) | 5) Tuck excess material and velcro through crevice |
| 2) Slip cover over backrest | 6) Attach velcro to carpeting on cushion cover |
| 3) Position side lever on backrest through opening | 7) Replace headrest (see note) |
| 4) Tuck stretch fabric to underside of backrest flap | |

NOTES:

 1) SELF-LOCKING SUPER-GRIP® BUCKLE:

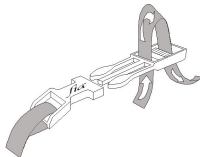

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
B) Replace headrests

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

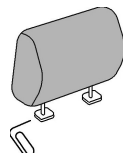

4) HEADREST COVERS

Some models may contain more than one set of headrest covers. Select the ones that fit your headrests best.

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

