



8010 351M-400 Ford

INTAKE MANIFOLD INSTALLATION INSTRUCTIONS

This instruction sheet is designed to cover a wide variety of vehicle applications. If your vehicle is not equipped with the items referred to in these instructions (EGR, transmission kick-down linkage, air conditioning, or power brakes), proceed to the next step.

Thank you for choosing WEIAND® for your manifold needs. It is our concern that you follow these instructions carefully, so that you can achieve the desired results. Slight errors in installation can make a big difference in performance, mileage, and emissions. Warranty is void, if proper installation procedures are not followed. PLEASE READ THE INSTRUCITONS COMPLETELY BEFORE **BEGINNING INSTALLATION.**

IMPORTANT: Although all WEIAND® parts pass several inspections, it is imperative that the installer personally inspects the part before installation. Run a stiff wire through all passages while shining a bright light into it. Also, wash the part using mild soap and water solution. Check the fit on all bolt holes for proper alignment and thread any fittings in first by hand. Failure to perform these simple checks could result in engine damage and may void your warranty.

APPLICATION: The WEIAND® 8010 ACTION PLUS manifold has been designed to be used on 351M and 400 (Wedge) Ford engines. These 180° dual-plane manifolds are designed as a stock replacement manifold with improved power and torque. The effective RPM range of these manifolds is off idle through approximately 6000 RPM. The carburetor-mounting pad is designed to accept either a stock or aftermarket carburetor. Combined with WEIAND's dyno-matched cam kits, the ACTION PLUS series provide the ultimate in economical street performance. The ACTION PLUS manifolds have been designed to accept most stock hardware, such as coolant and vacuum lines, coils, and brackets. Little alterations, if any, will be required.

NOTE:

It may be necessary to purchase some of the parts listed below (or their equivalents) in order to properly complete the manifold installation. Determination of equivalency is the responsibility of the consumer. WEIAND® does not assume that responsibility.

PARTS REQUIRED:

	Oil-r Spra Pipe Carb	ke manifold gasket set (Mr. Gasket P/N 5836 or 214) esistant, silicone-based sealant (Mr. Gasket P/N 78080G)) by gasket adhesive (Permatex® 80064 High Tack™ Spray-A-Gasket™ sealant or equivalent) plugs, if needed buretor-base gasket (Mr. Gasket P/N 55C) E tape
<u>NO</u>	<u>ΓΕ:</u>	Never install tapered (pipe) fittings in an aluminum manifold without PTFE tape or thread damage will occur.

TOOLS REQUIRED:

Socket wrench set—3/8" drive ratchet and extensions	Open end wrenches—3/8" to 1"
Box end/flare wrenches (optional)	10" adjustable wrench (crescent)
Ignition wrench set	Screwdrivers—standard & Phillips, various lengths
Gasket scraper	Needle nose pliers
Drain bucket	Timing light
Torque wrench	File
5/16 x 18NC & 3/8" x 16 NC tap (for cleaning bolt holes)	

MANIFOLD REMOVAL PROCEDURE

- 1. Disconnect the ground cable from the battery.
- 2. Identify the vacuum and crankcase ventilation hoses (if any) leading to air cleaner and note the routing and connection points. Remove the air cleaner.
- Prior to removing any other vacuum lines, identify the routing of the lines. Mark and remove the vacuum lines from the carburetor and/or intake manifold.
- 4. Drain the radiator. (It may be necessary to remove the bottom radiator hose if there is no drain plug in the radiator).

WARNING: Hot water and steam may be present if the engine is still warm.

- 5. Disconnect the throttle linkage, transmission kick-down linkage (auto trans. only), and choke rod from the carburetor, (if applicable).
- 6. Loosen the gas cap to relieve pressure from the fuel system. Disconnect the fuel line at the carburetor using flare wrenches. Plug the end of the fuel line to prevent fuel leakage. Remove the carburetor.
- 7. Tag and disconnect the ignition coil and sensor wires. Remove the ignition coil bracket and the coil.
- 8. Remove the radiator hose, thermostat housing, and the thermostat.
- 9. Remove all water and vacuum fittings from the manifold.
- 10. Remove all remaining brackets (if any) from the manifold.
- 11. Loosen and remove valve covers to assist in the manifold removal and the new manifold instructions.

IGNITION REMOVAL PROCEDURES

NOTE: In some applications, removal of your distributor is not necessary. If so, move on to step 6 below.

<u>CAUTION:</u> FOLLOW THESE INSTRUCTIONS CAREFULLY, AS SERIOUS DAMAGE CAN OCCUR WHEN THE IGNITION IS NOT RE-INSTALLED CORRECTLY.

- 1. Remove the distributor cap.
- 2. Note the position of the rotor and make a mark on the distributor case in line with the rotor tip.
- 3. Note the position of the distributor vacuum canister and place some type of reference mark on a convenient surface.
- 4. Note the position of the points, if open, how much; if closed, note the distance from the point block to the cam lobe.
- 5. Remove the distributor. **DO NOT** rotate the engine after removing the distributor.
- 6. Remove the intake manifold-to-cylinder head bolts.
- 7. Remove the intake manifold.

INSTALLING YOUR NEW WEIAND MANIFOLD

- 1. To prevent gasket pieces from falling into ports and valleys when cleaning old gaskets from head surfaces, lay rags into all ports and valleys. When clean, remove the stuffing carefully. Make sure that all particles that fell on the rags are completely removed. Wipe surfaces with rags soaked in lacquer thinner or alcohol to remove any oils or grease. This is a must for proper manifold/gasket sealing.
- 2. Apply a thin coat of spray adhesive to the cylinder head side of the intake gasket surface. Lay the manifold gaskets in place.
- 3. Apply a 1/4" wide bead of oil-resistant RTV-silicone sealant to the front and rear block-sealing surfaces, making sure to overlap manifold gaskets at all four corners. Do not use cork or rubber seals.

NOTE: Thread sealant should be used on all bolt threads.

Carefully, lay your WEIAND® intake manifold in place. If the manifold must be moved, recheck the gaskets. Install the intake bolts
initially torquing to 10 ft./lbs., then 15 ft./lbs., following the factory Ford sequence, and finally torque to 25 ft./lbs.

- 5. If you had to remove your distributor, install it at this time. Make sure that your distributor engages the oil pump drive shaft.
- 6. Check the location of the rotor and distributor body, making sure your reference marks line up. Refer to ignition removal section (steps 2, 3, & 4). Tighten the distributor body just enough that it can still be rotated by hand.
- 7. Install all water sensors and vacuum fittings into the manifold.

NOTE: Use PTFE tape or pipe dope on all pipe threads.

- 8. Plug all unused water and vacuum ports in the manifold.
- Install your four carburetor studs in the manifold. Place the carburetor gasket on the clean carburetor pad. Do not use any type of sealant on the carburetor gasket.
- 10. Install the carburetor. Connect all linkage and throttle springs.
- 11. Connect all vacuum and fuel lines. Refer to your tags or drawings for correct placement.
- 12. Automatic transmissions only: Adjust kick-down or throttle pressure linkage for proper shift points. Check all linkages, making sure that there are no obstructions in function.
- 13. If required, reinstall valve covers with new gaskets.
- 14. Install the A/C and coil brackets, coil, wires, and all brackets that were removed from the manifold.
- 15. Close the drain and fill the radiator to the proper level with coolant.
- 16. Retighten the gas cap and connect the battery cable.
- 17. Hook up the timing light and start the engine. Set the timing to factory specs. Tighten the distributor.
- 18. Check for possible fuel, oil, or coolant leaks and for proper choke operation.
- 19. Install the air cleaner.

<u>CAUTION:</u> Check to be sure that there is adequate clearance for the throttle and choke linkages through their range of travel.

IMPORTANT: Check for adequate hood clearance before closing the hood.

20. Operate the engine for 30 minutes. Allow the engine to cool and re-torque the manifold bolts following step 4 above.

YOUR MANIFOLD INSTALLATION IS COMPLETED.
NOW IS A GOOD TIME TO CHANGE YOUR OIL AND FILTER!



Weiand® Technical Support 1801 Russellville Road Bowling Green, KY 42101

Phone: 1-270-781-9741

For online help, please refer to the Tech Service section of our website: www.weiand.com

W501

Revision Date: 1-25-17