

DV8 SR-05 Rock Skins

For install, you will need the following.

- Drill
- 1/8 & 7/16 drill bits
- Wrenches
- 5mm Allen wrench


When installing the DV8 Offroad Rock Skins, it is very important to know and understand how to use rivnuts

Depending on if these are going to be installed on a 2 door or a 4 door Jeep, see the below configurations.

2 Door:



4 Door:

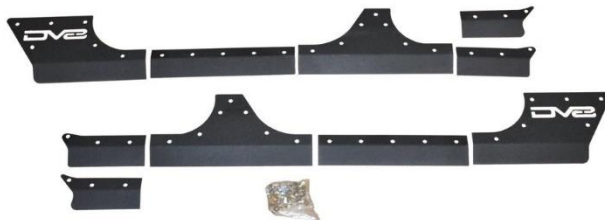

- When installing the rock skins, take the front most piece and hold it on the Jeep in front of the door. Ensure that the piece sits flush against the vehicle and even along with the rim of the door jam. See image.



- Mark the holes with a punch in the center on the hole. On sheet metal, it is very important to start with a small drill bit and then step up to a larger bit so you don't warp the surround metal.
- Start with 1/8 drill bit, then step up to the larger 7/16 drill bit. Insert rivnut and install rivnut ensuring not to over tighten. Install front plate.
- After front plate is installed, hold up the next two plates to check for spacing and gap width needed. You can then continue to install remaining plates.

If you have any questions please feel free to contact us at 951-680-9595 or at info@dv8offroad.com