

**FBFF1-03****2015-2016 Ford F-150 Baja Front Bumper****WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION**

**Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.**

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

• *Always wear eye protection when operating power tools.* •

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:*


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



1. Remove your new bumper from its packaging and inspect. If any damage is noted please call the company you purchased the bumper from before installation.
2. Remove factory bumper from truck, depending on the engine (V8 or ecoBoost V6) the amount of tear down will be different. Many videos can be found online going into depth.
  - a. Note: On the ecoBoost models you must also remove the plastic shroud around the intercooler
3. Remove the included 40" light bar. This will give you better access to the main support bolts.
4. Install the center section of the bumper. You will reuse factory hardware here.
  - a. Leave all hardware loose until the end.




5. Install both wings onto center section using supplied hardware. Leave wings loose.

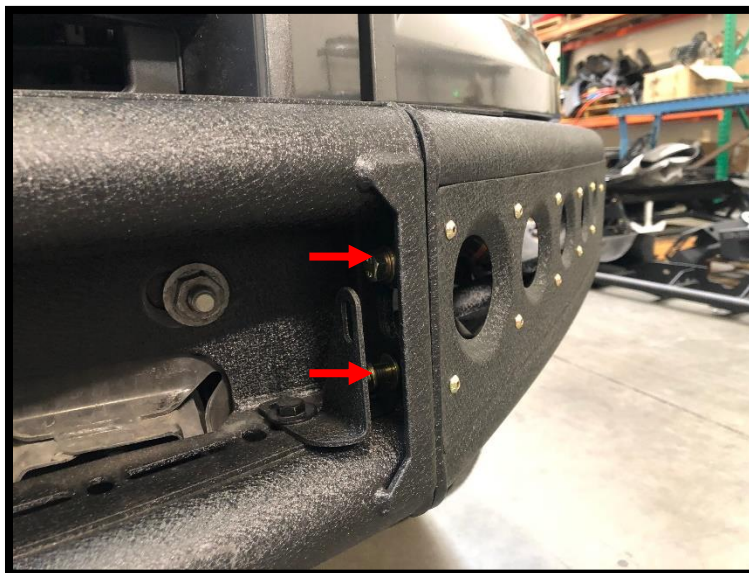





6. With the wings installed, there should be a slight gap between the frame and arm support of the bumper. Install the upper bracket for the skid plate between the support arm and frame. Using supplied hardware, install bolts and leave loose.

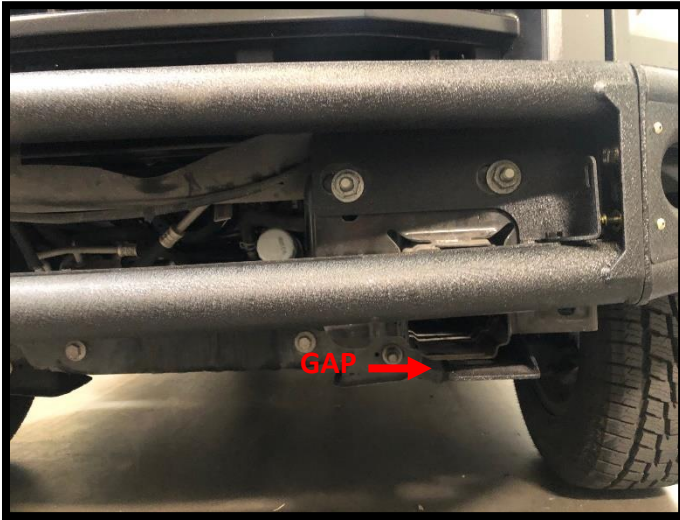


7. Install the lower bracket for the skid plate on the A-arm cross member using supplied hardware.
  - a. **Note:** the angled piece must face towards the front of the truck.

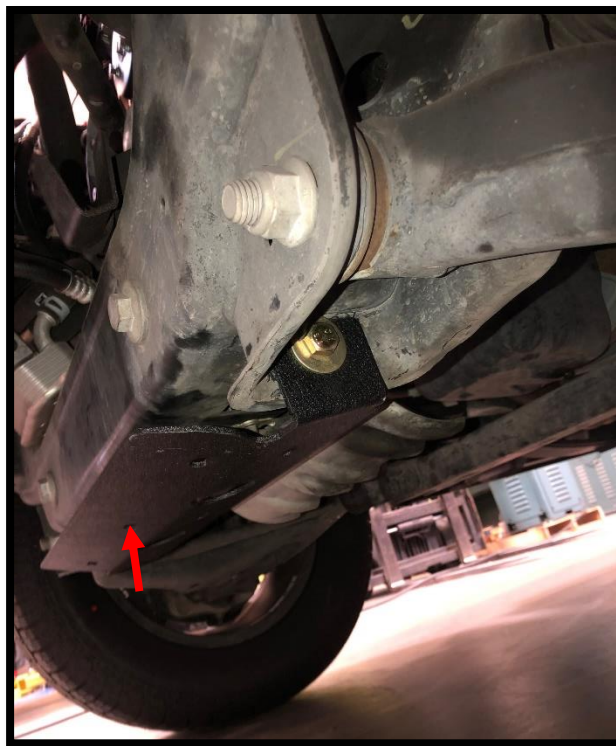

8. Install the skid plate onto the bracket using supplied hardware.

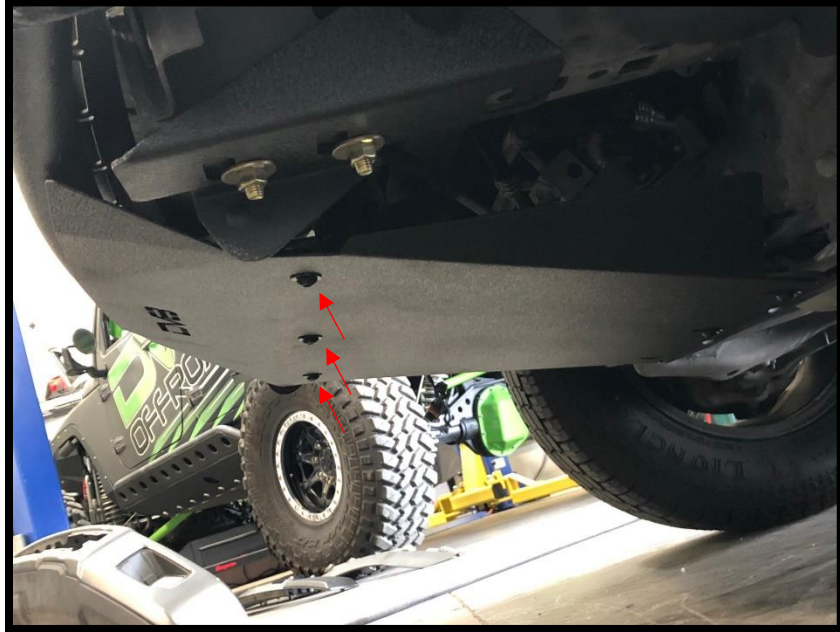

9. Once all items are bolted together, began at the bumper center section, then continue to the wings, wing arm supports, and lastly skid plate. Once all is aligned and tight, reinstall the light into the bumper.

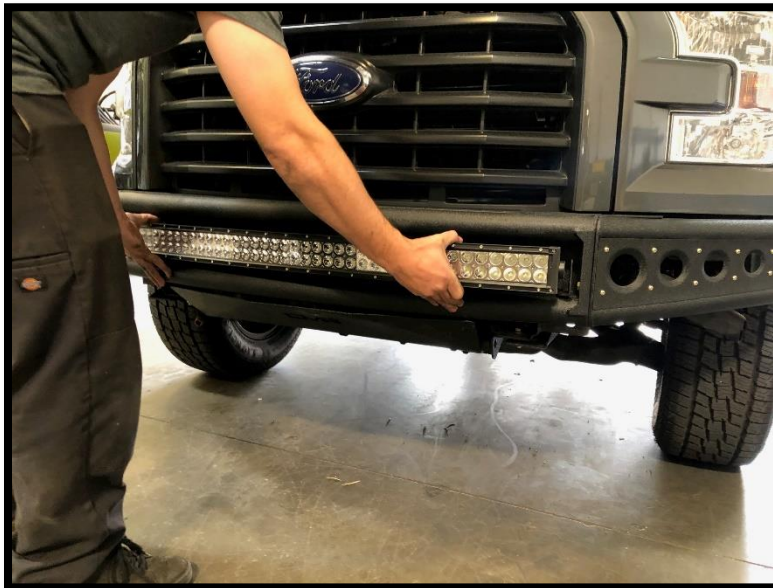

**If you have any questions, please email us at [info@dv8offroad.com](mailto:info@dv8offroad.com) or call us at 951-680-9595**

