



GMC Canyon Center Mount Bumper

(FBGC-01)

1. Begin by removing all parts and inspecting them prior to install process.
2. Remove the upper grill cover held on by push pins and screws. Unbolt top of grill.
3. Remove lower skid plate. Be sure to keep all hardware for some will be reused.

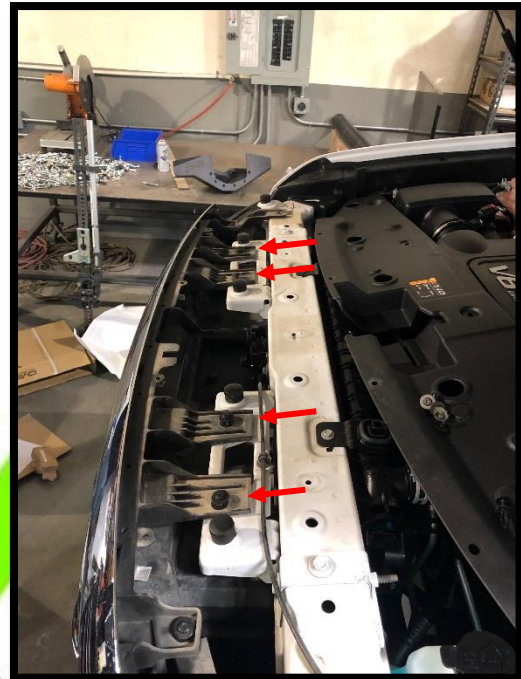

4. Unbolt front of both inner fenders. Pull back the front of the inner fender. Remove the two screws holding the bumper to the front of the fender.

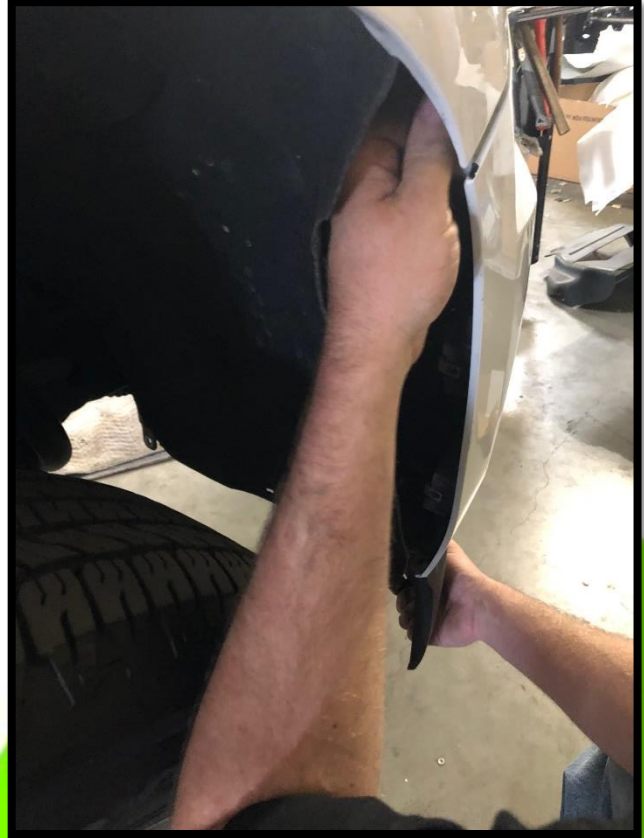

5. At this point, the bumper should be able to be removed. Once removed. Remove the lower valence and the inner supports.



6. Remove the factory crash bar from front of vehicle. Install the new bumper onto the truck. Tighten all hardware. If installing a winch, install winch prior to placing bumper on truck.
- a. Install face plate onto bumper using supplied hardware.



7. Remove grill insert on bumper where the bumper will lay. Squeeze clips to remove opening.



8. Reinstall the bumper and grill onto the truck.



9. Install skid plate using factory hardware in the factory skid plate location.



10. Once bumper and grill and new skid plate are installed. Reattach all points of the bumper and inner fenders. Double check all hardware.

If you have any questions, please email us at info@dv8offroad.com or call us at 951-680-9595