




AMERICAN CAR CRAFT INSTRUCTIONS

**C5 2-pc PERFORATED STAINLESS REAR VENT GRILLES
PART #032016**

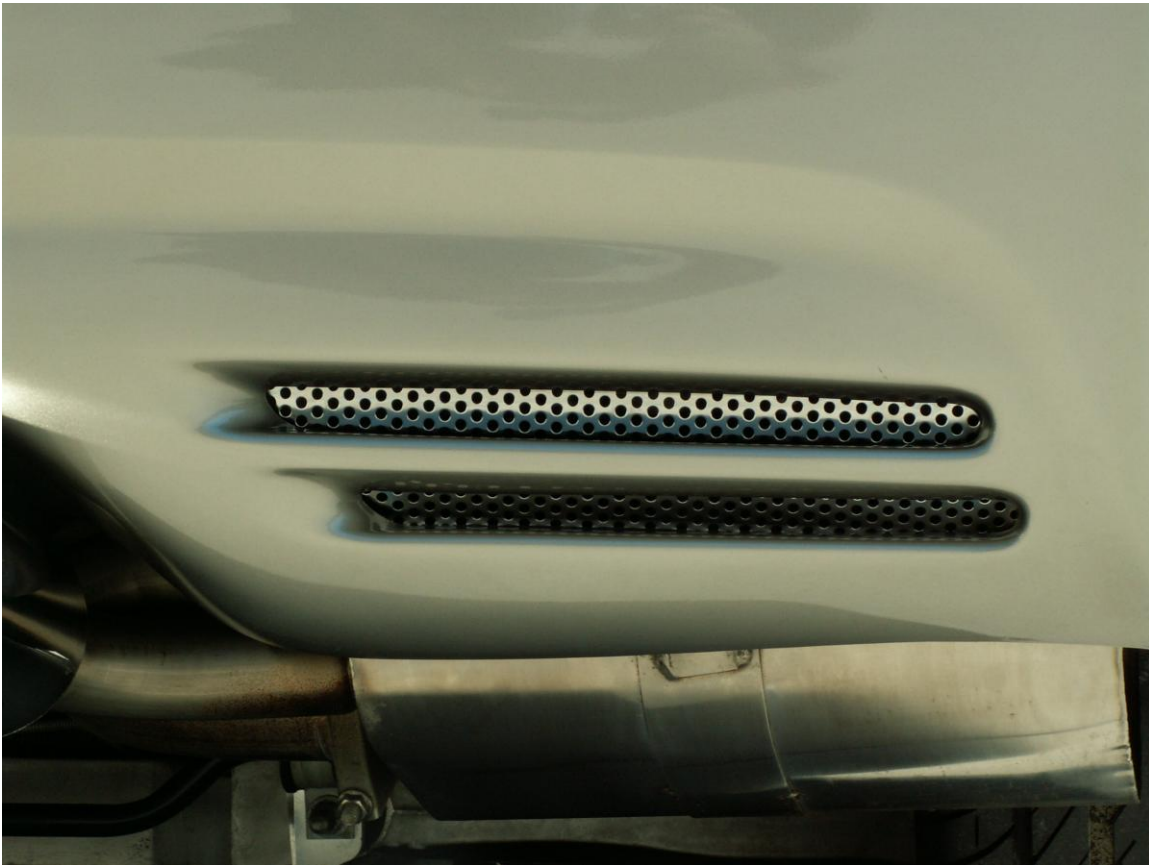

PARTS INCLUDED:

2-Stainless Vent Grilles

2-Adhesive Promoter Packs

1. Your new grilles are designed to install from the backside of the bumper vent opening. Before you begin you must first prepare the backside of the bumper area by removing any and all dirt deposits that may be present first then scrub the upper and lower areas with household rubbing alcohol. After this area has been thoroughly cleaned swipe the same area with the adhesive promoter provided.

2. Once the cars inner bumper has been properly prepared you can now begin installation. Before permanently attaching the new grille place it into position to get acquainted with how it will slide into place and with the overall fit. Although it should not be necessary take this opportunity to make any adjustments to the shape of the new grille so that it installs flush to the car.

3. Once you are satisfied with the fit simply pull the release liner from the attachment tape. NOTE: Because of the attachment tape being on both the top and bottom edges it is suggested that you put a coating of household rubbing alcohol on at least one of the pieces of tape in order for it to slide in. Then reposition the grille and press firmly to both the painted side and the grille side to create a nice permanent bond.

4. Repeat steps 1-3 for opposite side.

**If any questions occur during installation please call American Car Craft at
727-861-1500.**

Thank you!

**AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com**