




AMERICAN CAR CRAFT

C5 FENDER COVER EXTENSION

PART#033022

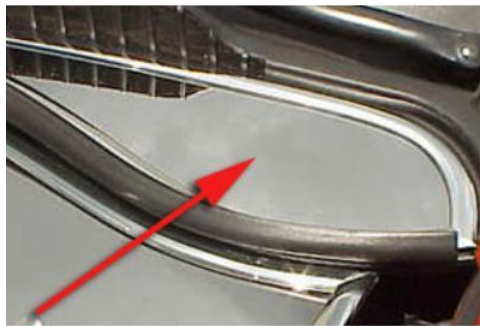

1. Pull up the cowl gasket at the drivers' side.
2. Clean area.
3. Apply 2 or 3 spots of clear household silicone on the cowl where your new fender extension is to be installed. Set in place and replace gasket.
4. Allow 24 hours to dry.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner.

If any questions occur during installation, please contact American Car Craft at 727-861-1500.

Thank You and Enjoy Your Purchase.

**AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com**