

INSTALLATION INSTRUCTIONS - INS177

X-PIPES

Part # 1786 and 1787 // Fit BBK long tube Coyote 5.0 swap headers
Part # 1634 and 16340 // 1987-2004 Mustang swap




Special Tools required: No special tools required.



Install Time: Approximately 1 hours.



Difficulty: Easy.

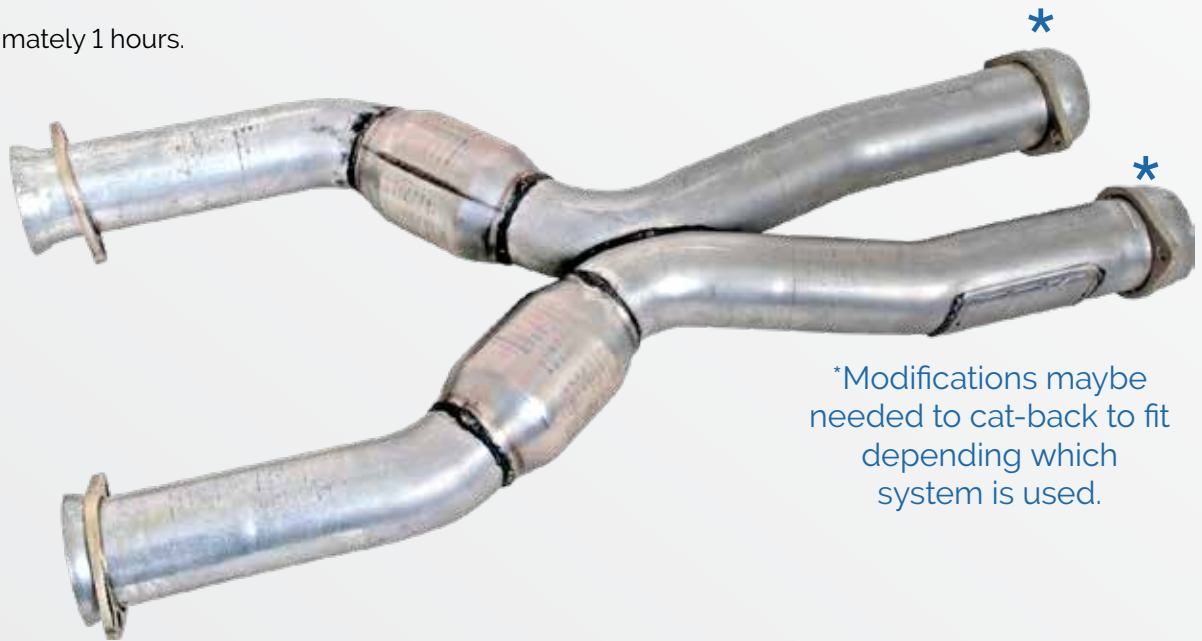

*Modifications maybe needed to cat-back to fit depending which system is used.



ATTENTION: These X-Pipes are designed to be used with BBK's Coyote Swap Headers # 1634,16340

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1

With the vehicle raised in the air and supported on jack stands, pre-install the BBK Coyote Swap Headers and the supplied studs into the header collectors.

STEP 2

Lift the X-Pipe assembly into place and support with a jack. Connect the front flanges of the X-Pipe to the header collectors. Slide the X-Pipe flanges over the header collector studs.

STEP 3

Install the nuts and washers provided with the headers, onto the collector studs.

STEP 4

Connect the rear of the X-Pipe to the stock flow tubes going to the mufflers.

STEP 5

Position the X-Pipe for the best fit and ground clearance and tighten all the nuts and bolts.



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019