



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

**44-7087/44-7090**  
**RZR/Wildcat A-pillar Kit Instructions**



**185 Bosstick Boulevard • San Marcos • CA • 92069**

**Phone 760-560-2252 • Fax 760-560-0383**

**info@bajadesigns.com • www.bajadesigns.com**



***baja designs***<sup>®</sup>  
*The Scientists of Lighting*

## **LIMITED LIFETIME WARRANTY**

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise. Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.


### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.**



**baja designs**  
The Scientists of Lighting

1. Remove the M10 bolts with a 15mm socket that holds the A-Pillar of the roll cage together.
2. Be sure to catch the two M10 lock nuts on the back side of the bolts you just removed.
3. Place the provided mount on the outside of the cage and re-install the bolts (For Textron Wildcat replace the stock hardware with provided bolts). This might be difficult depending on how much the roll cage stretches in when the bolts are removed.

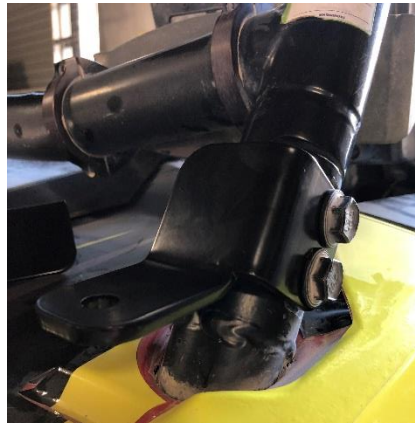

4. Mount your lights on the mounting bracket you just installed with the provided 3/8" stainless steel bolt provided with your lights.



5. Repeat steps 1-4 on the opposing side.
6. Mount both lights with the 8 1/4-20" x 5/8" bolts provided with the kit. Be sure to use two washers per bolt provided.

Refer to your wiring harness instructions to complete assembly.