



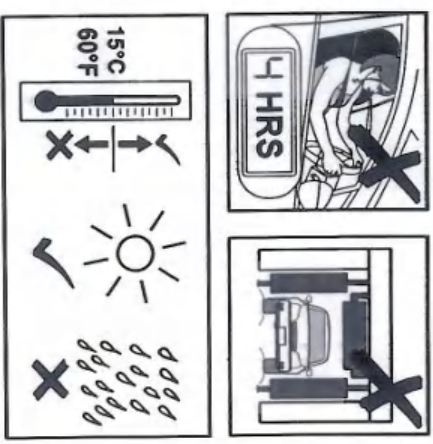

REAR BUMPER PROTECTOR INSTALLATION INSTRUCTIONS



Tools Required

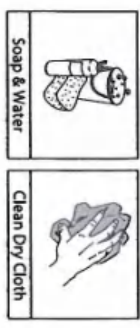

1• Open vehicle trunk/liftgate. Thoroughly clean vehicle area where Bumper Protector will contact bumper using clean lint free cloth and provided alcohol wipes.

2• Without removing tape liner, trial fit Bumper Protector by aligning center of the bumper protector with the Striker Latch.
Mark Bumper Protector location with a non-permanent marker or grease pencil.

3• Turn Bumper Protector over to expose tape liner. Completely remove liner from two (2) smallest pieces of tape. Remove approximately 2" of liner from long pieces of tape and fold at 45 degrees.

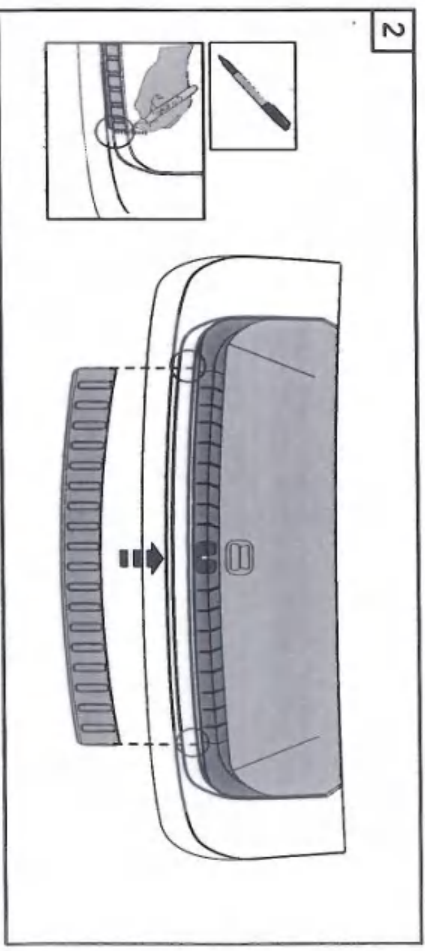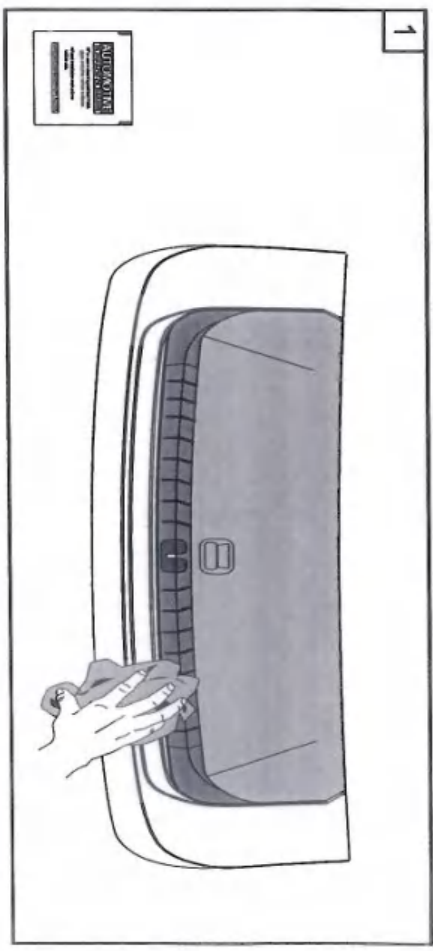

MADE IN USA

09-18-2018


For Technical Support/Warranty Information please contact EGR, Inc. at 800 - 757 - 7075



REAR BUMPER PROTECTOR

INSTALLATION INSTRUCTIONS

Tools Required

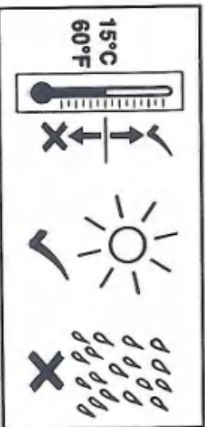

MADE IN USA




09-18-2018

4• Re-align Bumper Protector with vehicle Striker Latch and previously marked end locations. Once satisfied with placement, apply downward pressure at the ends of Bumper Protector. Remove tape liner by pulling toward center of Bumper Protector.

5• Apply downward pressure to Bumper Protector to ensure maximum adhesion is achieved between tape and bumper.

IMPORTANT: Before fitting product, read instruction fully. Full tape strength is achieved after 72hrs. Allow tape to cure for 4hrs before driving vehicle.

To Clean:
• Use mild detergent and water solution
• Do not use solvents
• Avoid the use of automatic "Brush Style" car washes.

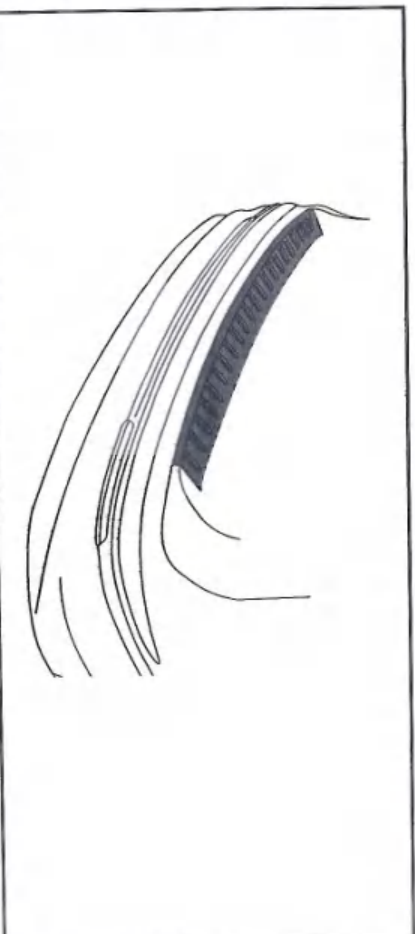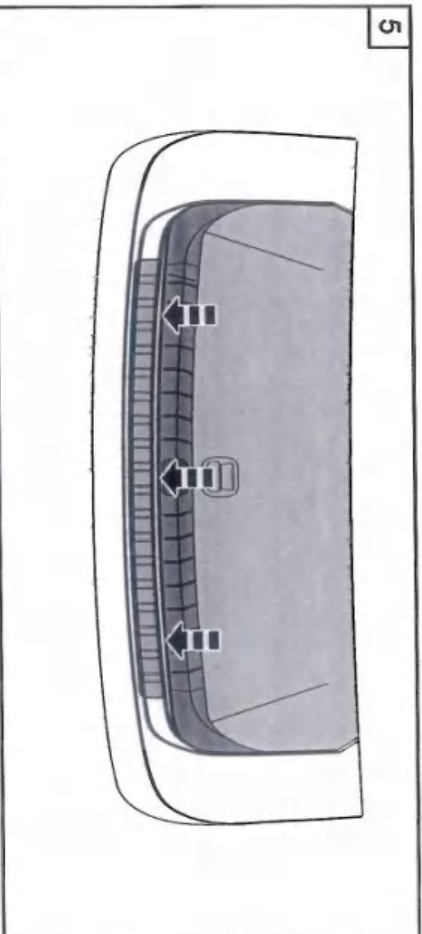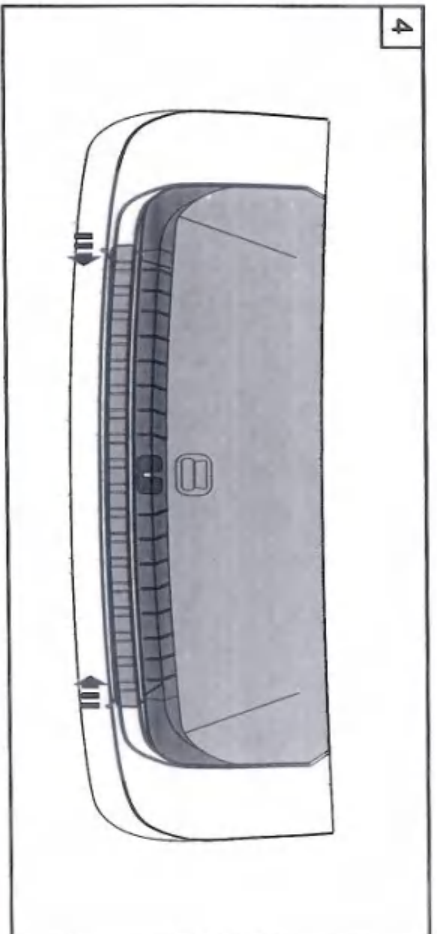

For Technical Support/Warranty Information please contact EGR, Inc. at 800 - 757 - 7075