


INSTRUCTION MANUAL SUPER TRUCK STAINLESS EXHAUST SYSTEM Ford F-150 Truck 4.2L-4.6L-5.4L 2wd Standard Cab, Short bed PART # 69536

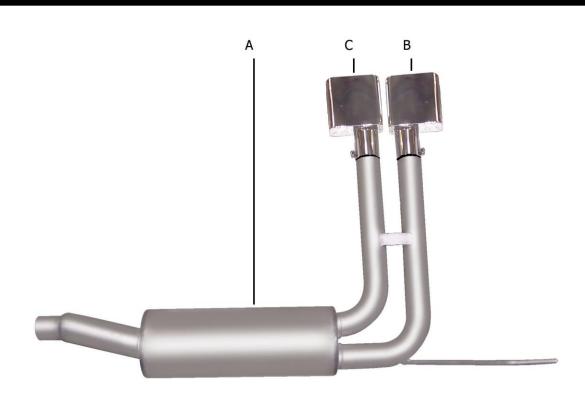

ITEM	PART #	QUANTITY	DESCRIPTION
A B	947-700723S 500365	1	STAINLESS MUFFLER & TAILPIPE ASSEMBLEY SUPER TRUCK TIP
C	500366	1	SUPER TRUCK TIP

Mfg after Aug 2004/ No Heat Shield

Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044, Monday through Friday, 8:00 am to 5:00 pm.

EXHAUST INSTALLATION #69536

WHEN INSTALLING THIS EXHAUST SYSTEM MAKES SURE YOU USE ALL THE PROPER SAFTEY PRECAUTIONS. USE JACK STAND TO SUPPORT THE TRUCK WHILE OFF THE GROUND. SET PARKING BRAKE, BLOCK THE TIRES AND USE SAFTEY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

1/2",9/16", 15mm WRENCH AND SOCKET, WD-40, HACKSAW, JACKSTAND



TO REMOVE YOUR STOCK EXHAUST, REMOVE IT FROM THE CLAMP LOCATED JUST IN FRONT OF THE MUFFLER. DO NOT DISCARD STOCK CLAMP, YOU WILL RE-USE IT. REMOVE HANGERS FROM RUBBER GROMMETS BY PULLING EXHAUST TOWARDS THE REAR OF THE VEHICLE, USE WD-40 TO AID IN REMOVAL, LEAVE GROMMETS IN PLACE.



INSTALL STAINLESS TIPS, CLAMP DOWN. TO CLEAN YOUR STAINLESS TIPS USE ANY STAINLESS CLEANER OR A SCOTCH BRITE PAD. NOW GO AND TIGHTEN ALL CLAMPS, NUTS AND BOLTS. START FROM THE FRONT AND WORK BACK.



INSTALL MUFFLER
ASSEMBLY #A. USE A JACK
STAND TO SUPPORT THE
MUFFLER. RE-USE YOUR
STOCK CLAMP TO SECURE
THE MUFFLER TO THE
MUFFLER ASSEMBLY. DO
NOT TIGHTEN.



INSTALL WELDED HANGER INTO RUBBER GROMMET

MAKE SURE YOU AT LEAST A 1" CLEARANCE AWAY FROM ALL BRAKE LINES, FUEL LINES, SHOCKS, TIRES, ETC.

Vehicle Photos (DO NOT PRINT)









