

STEP 3. POSITION 1122BD LOWER BRACKET OVER THE BOLTS, AND ATTACH IT TO THE FRAME FLANGE USING THE FACTORY NUTS. (FINGER TIGHTEN ONLY).




STEP 4. INSERT 1122AD UPPER BRACKET THROUGH THE OPENING IN THE GRILLE, AND ATTACH IT TO 1122BD LOWER BRACKET USING THE 5/16" HEX HEAD BOLTS. (FINGER TIGHTEN ONLY).




STEP 5. REPEAT THE ABOVE STEPS FOR THE PASSENGER SIDE BRACKETS.

STEP 6. ATTACH THE GRILLE GUARD ASSEMBLY TO THE LOWER BRACKETS USING THE 1/2" FASTENERS.

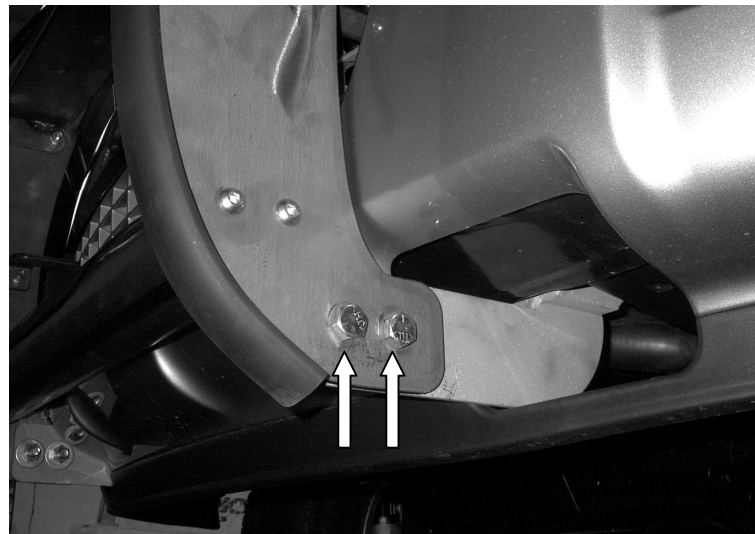

STEP 7. ATTACH THE GRILLE GUARD ASSEMBLY TO THE UPPER BRACKETS USING THE 3/8" FASTENERS.

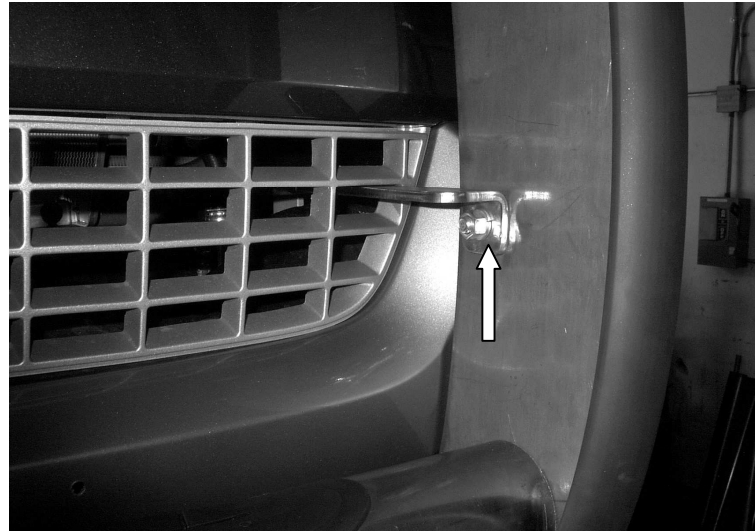

STEP 8. ALIGN THE GRILLE GUARD ASSEMBLY WITH THE FRONT OF THE VEHICLE AND TIGHTEN ALL MOUNTING NUTS AND BOLTS.

STEP 9. ATTACH 1122LP LICENSE PLATE BRACKETS AND THE LICENSE PLATE TO THE BOTTOM SIDE OF THE GRILLE GUARD CENTER PLATE, USING THE 1/4" FASTENERS.



STEP 10. RE-ATTACH THE RUBBER SPLASH GUARD USING THE PLASTIC RIVETS SUPPLIED.
