

INSTALLATION INSTRUCTIONS 4031

04 - 12 C Chevy Colorado/Canyon Regular/Ext. Cab

Parts List:

QTY

(1) Sidebar set (Driver & Passenger)	(2) Front mounting bracket (2) Rear mounting bracket	(1) Hardware kit including: (4) 1/2 x 2" hex head bolt (4) 1/2" Flat washer (4) 1/2" Lock washer
---	---	---

Tools required:

3/4" Socket Ratchet
18mm Socket

Instructions:

Aproximated installation time: 25 min.

1. Read and understand instructions completely before beginning installation.
2. Loosen the body mounting bolts from mounts located under the cab of the vehicle just enough to slide mounting brackets.
3. Place the front/rear mounting brackets up to the body mounts and retighten. Hand tighten at this moment.
4. Place the sidebar up to the mounting brackets. Bolt front/rear mounting brackets using 1/2 x 2" hex head bolt, flat and lock washers. Leave loose.
5. Make any final adjustments to the alignment of the sidebar and tighten all bolts. Repeat for the opposite side.
6. You may need to periodically re-tighten the bolts.

Assembly Diagram:

Picture 1


Front mounting bracket, passenger side



Existent bolt, untighten enough to locate the bracket.

Picture 2

Rear mounting bracket, passenger side.

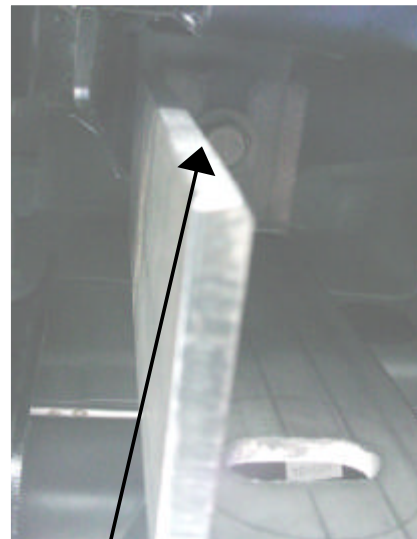

Existent bolt, untighten enough to locate the bracket, or remove the bolt to locate easier the bracket on the bolt, tighten again.

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.