




## INSTALLATIONS INSTRUCTIONS 37332 SIDE BAR

1. Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
2. Nerf step set consists of a driver and passenger side. Be sure to determinate the correct side before installation. **See illustration 1.**
3. Insert the clip nut in the upper hole of the rocker panel. **See illustration 2.**
4. Place bracket front shown in illustration 2. Attach the clip nut with: ( 2 ) 3/8 x 1 1/4" hex head bolt, ( 2 ) 3/8" flat and lock washer. Attach the rocker panel with: ( 2 ) 3/8 x 1 1/4" hex head bolt, ( 4 ) 3/8" flat washer, ( 2 ) 3/8" lock nut. Leave loose. **See illustration 3.**
5. Install the rear bracket of the same form that front bracket. See illustration 3.
6. Place the Side Bar to brackets and attach with: ( 1 ) 1/2 x 2" hex head bolts, ( 1 ) 1/2" flat and lock washers. By each side. Leave loose. **See illustration 3.**
7. Align the sidebar to the vehicle and tighten all hardware.
8. Repeat for the other side of vehicle.
9. Fill out the warranty card included and place it inside your vehicle.

**ILLUSTRATION 3**

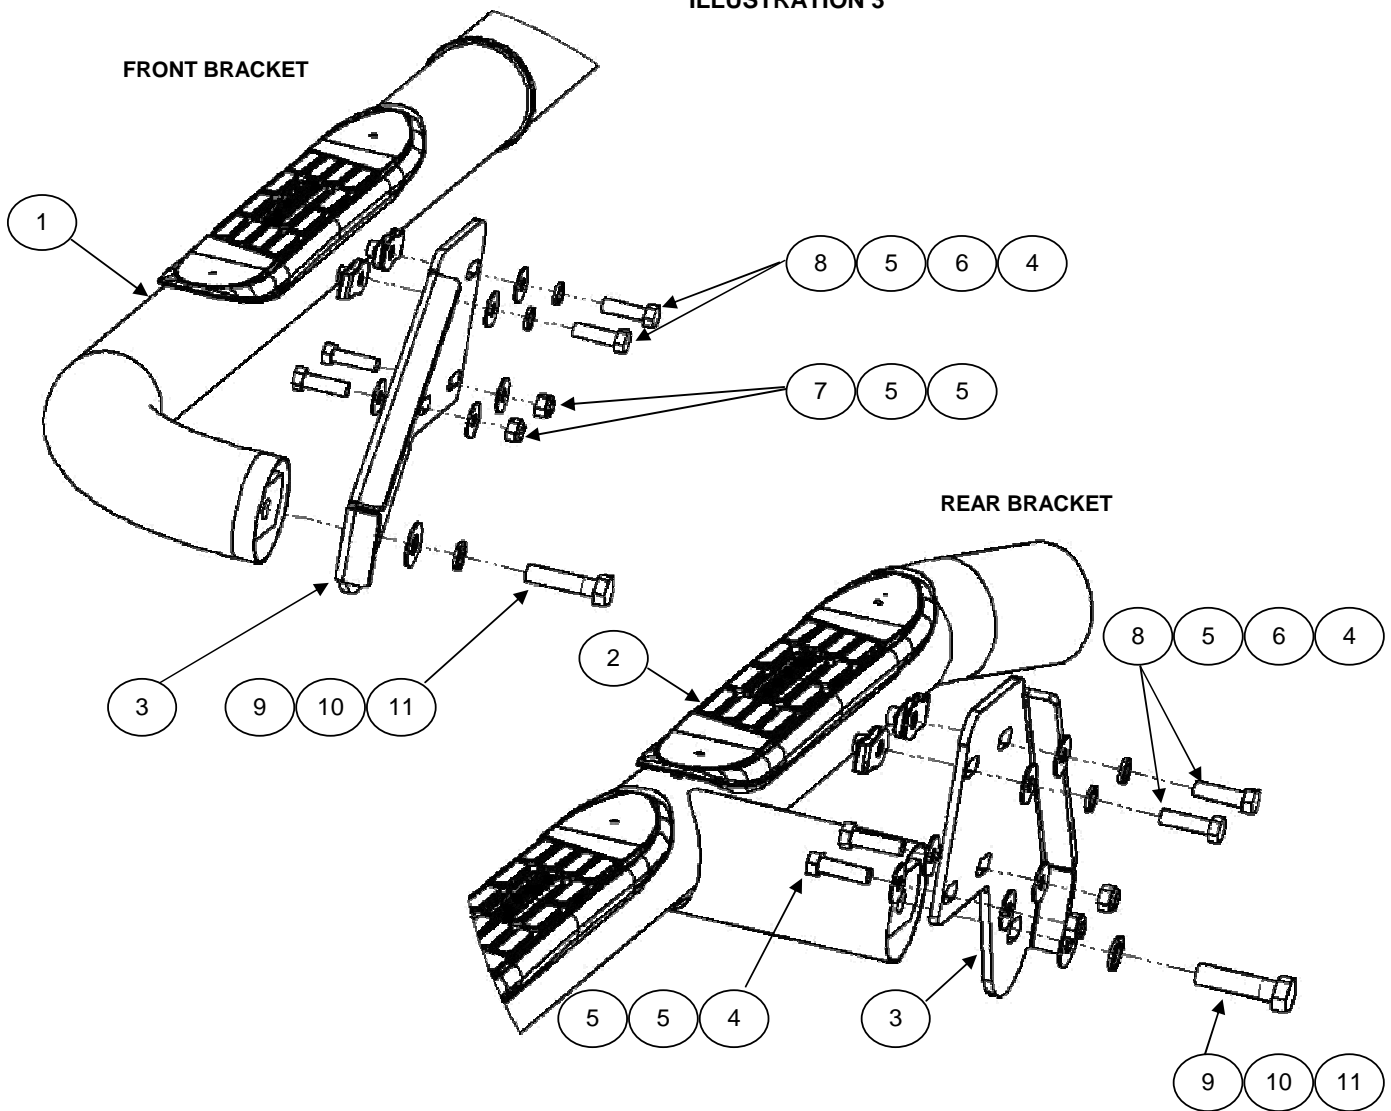

**NOTE: Illustration passenger side.**

**Cleaning and care instructions:**

Design :

Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.