



Installation Instructions

717902

2015-2019 MUSTANG BASE 2.3L, 3.7L COUPE & CONVERTIBLE

OVERVIEW:

1. Please take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts before starting the installation process and call our tech line to report any missing parts. This will help avoid potentially stranding your vehicle until any missing replacement parts arrive.

PART NO.	DESCRIPTION	QTY.
70001-536	Left Muffler Assembly	1
70001-537	Right Muffler Assembly	1
PK798	Hardware Pack includes:	1
MC225BS	2¼" Stainless Band Clamp	2

REMOVE STOCK EXHAUST SYSTEM:


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:


Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease disassembly of factory components:


- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle.

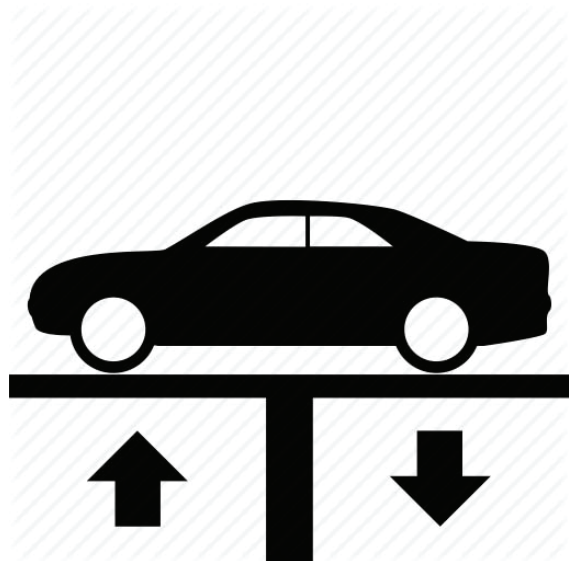

3. For convertible model vehicles, remove and retain bolts and body braces to access exhaust system.

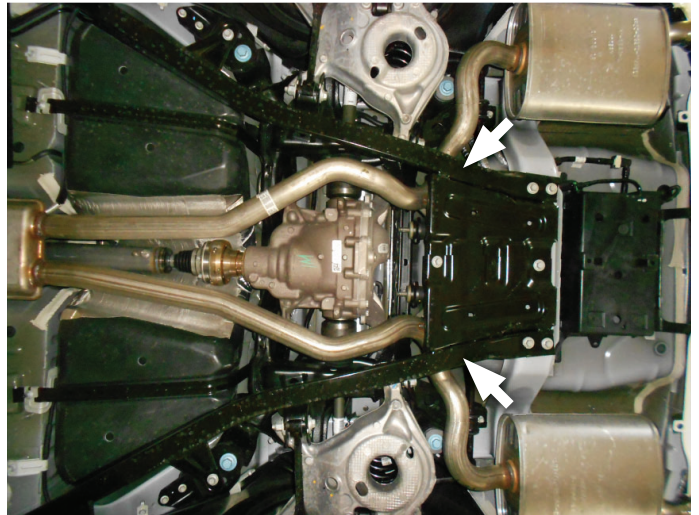

4. Measure and mark 2½" from beginning of straight section on exhaust pipes (x2) as shown. Support then cut pipes at marks. Unbolt hanger mounts and remove tailpipes from vehicle.

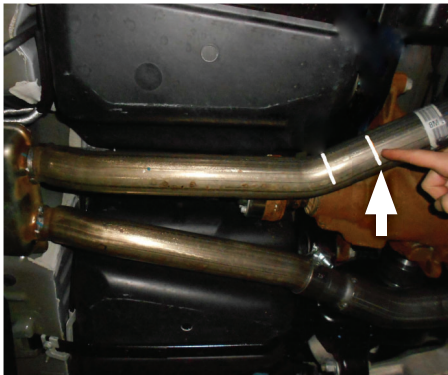

INSTALL FLOWMASTER EXHAUST SYSTEM

5. Transfer factory hanger mounts (x2 ea.) from each tailpipe over to corresponding FFX mufflers. Remove nuts from stock and Flowmaster clamps, apply anti-seize compound to bolts and re-install nuts.

NOTE: The image in this step is intended for illustrative purposes only and may or may not accurately reflect components included in your kit.




- Place clamps (x2) (MC225BS) onto left and right mufflers (70001-536, 70001-537) then connect them to cut pipes and re-bolt hanger mounts onto vehicle.



- Adjust and level mufflers exhaust components to provide a satisfactory fit. The muffler tips should be centered in bumper cutouts. After making any required adjustments, securely tighten clamps.
- We recommend applying a one inch tack weld to all slip-fit connections for a more secure installation. You may also apply high temperature paint over welded areas to prevent rust and premature corrosion.



Congratulations, the installation of your FLOWMASTER performance exhaust system is now complete!

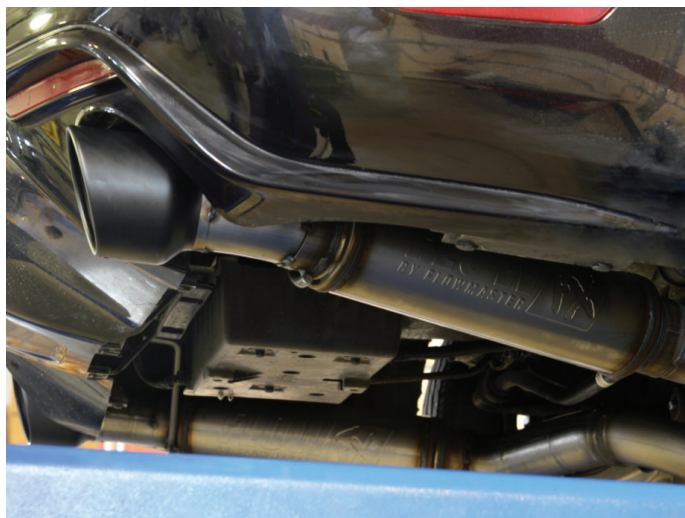



Installation Diagram

717902

2015-2019 MUSTANG BASE 2.3L, 3.7L
COUPE & CONVERTIBLE

