


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD FULL SIZE VAN FRONT SEAT LINERS

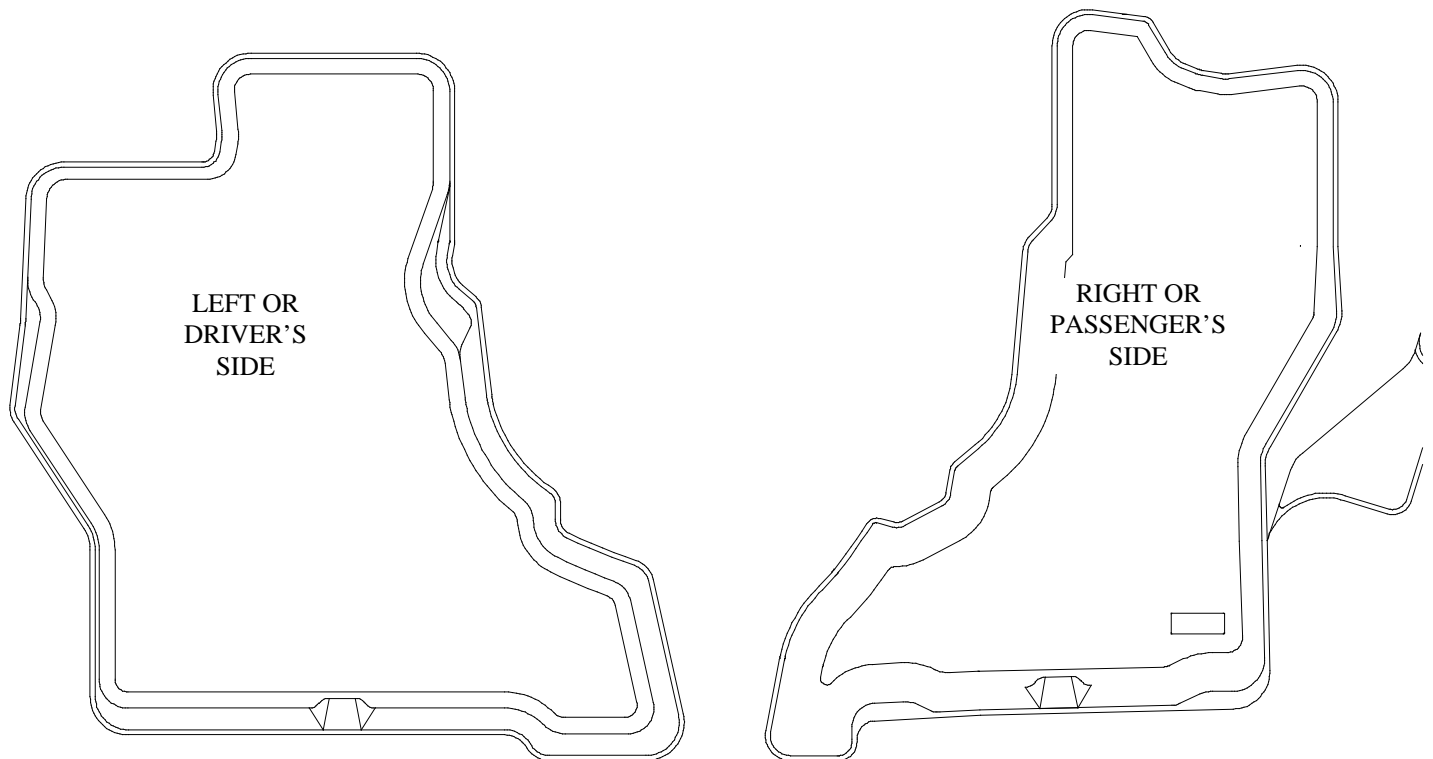

NOTICE: WHEN INSTALLING YOUR PASSENGER SIDE LINER, YOU MAY NOTICE THAT IT DOES NOT MATCH WITH THE EXISTING INNER STEP. THIS IS DUE TO VARIATIONS IN VANS AND VAN CONVERTERS AND CAN BE EASILY REMEDIED. TRIM OFF THE EXCESS PORTION OF YOUR LINER BY TRIMMING ALONG THE TOP OF THE RAISED RIDGE AS SHOWN ABOVE. A UTILITY KNIFE OR HEAVY SCISSORS WORK WELL FOR TRIMMING.