



X-ACT CONTOUR


FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN:52711

Thank you for selecting an X-act Contour™ 2nd Seat Floor Liner from Husky Liners Inc. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

FRONT OF VEHICLE

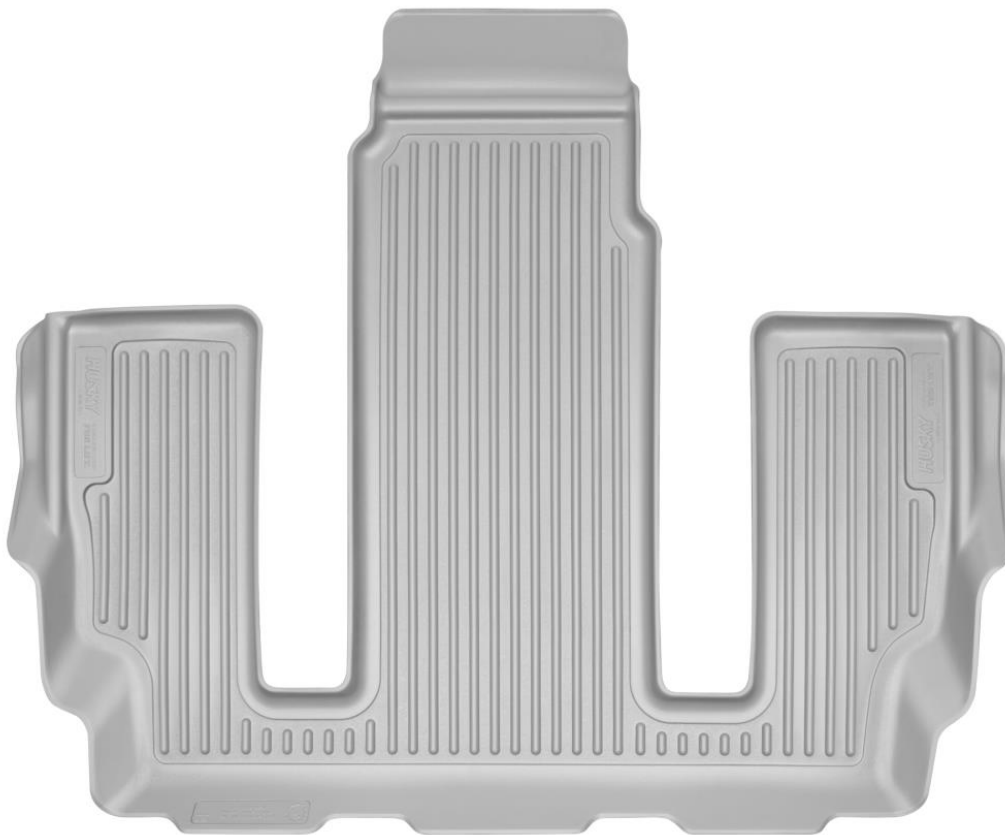

TO EASE INSTALLATION OF YOUR 3RD SEAT FLOOR LINER, FLIP BOTH 2ND ROW SEATS FORWARD TO ALLOW EASIER ACCESS TO THE 3RD ROW FLOOR PAN. ONCE YOU HAVE INSTALLED YOUR LINER, REPOSITION THE 2ND ROW SEATS AS DESIRED. NOTE THAT THE “TONGUE” SECTION OF THE 3RD SEAT LINER TUCKS UNDER THE BACK EDGE OF THE 2ND SEAT LINER