

IAG I-Line Mud Flap Front Set Only for 2021+ Ford Bronco



IAG-BDY-F3037 - IAG I-Line Mud Flap Set Front Only for 2021+ Ford Bronco

Part# IAG-BDY-F3037

Congratulations on the purchase of your IAG I-Line Mud Flap Set (Front Only), and thank you for choosing IAG Performance. These instructions are intended for users with basic mechanical skills. Professional installation is not required. The average installation time is 15 minutes.

Video Instructions can be found here:

<https://www.youtube.com/watch?v=is0sr7FebeM>

Step 1/14

Step 2/14

IAG-BDY-F3037 - IAG I-Line Mud Flap Set Front Only for 2021+ Ford Bronco

Part# IAG-BDY-F3037

Tools Required For Installation:

Phillips Head Screwdriver


M5 Allen Wrench (Included)

Step 3/14

Numbered annotations (7)

- 1 Front Left Mud Flap
- 2 Front Right Mud Flap
- 3 Front Left Mounting Bracket
- 4 Front Right Mounting Bracket
- 5 Slip Nut x 4
- 6 M5 Allen Head Bolt and Washer x 8
- 7 M5 Allen Key




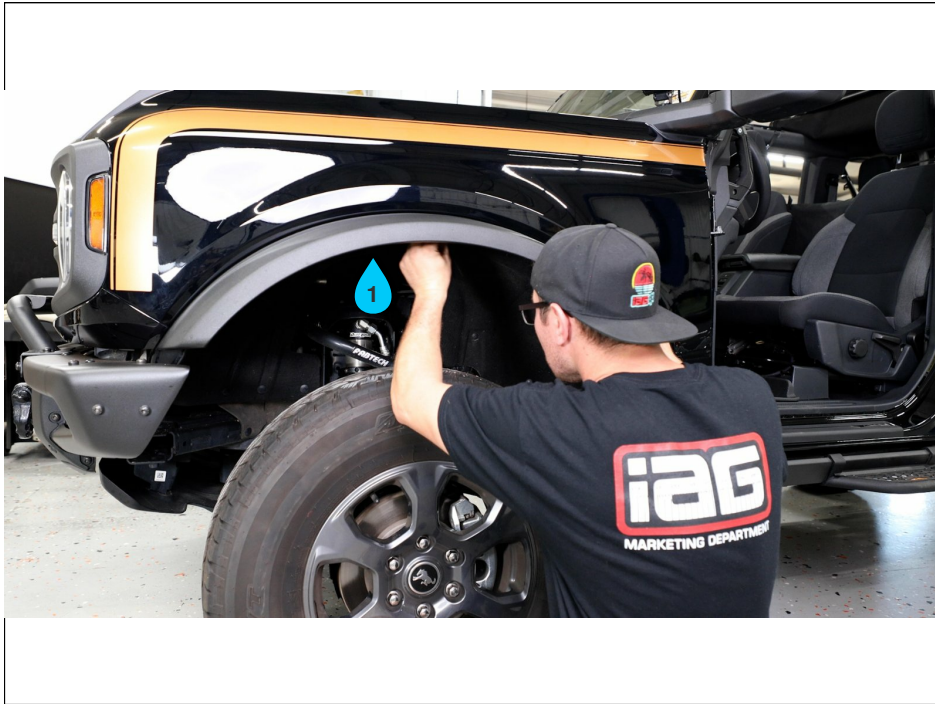

Step 4/14

Numbered annotations (1)

- 1 Starting on the front driver's side, detach the front factory fender flare by turning the 5 factory clips. Pull the fender flare straight out.

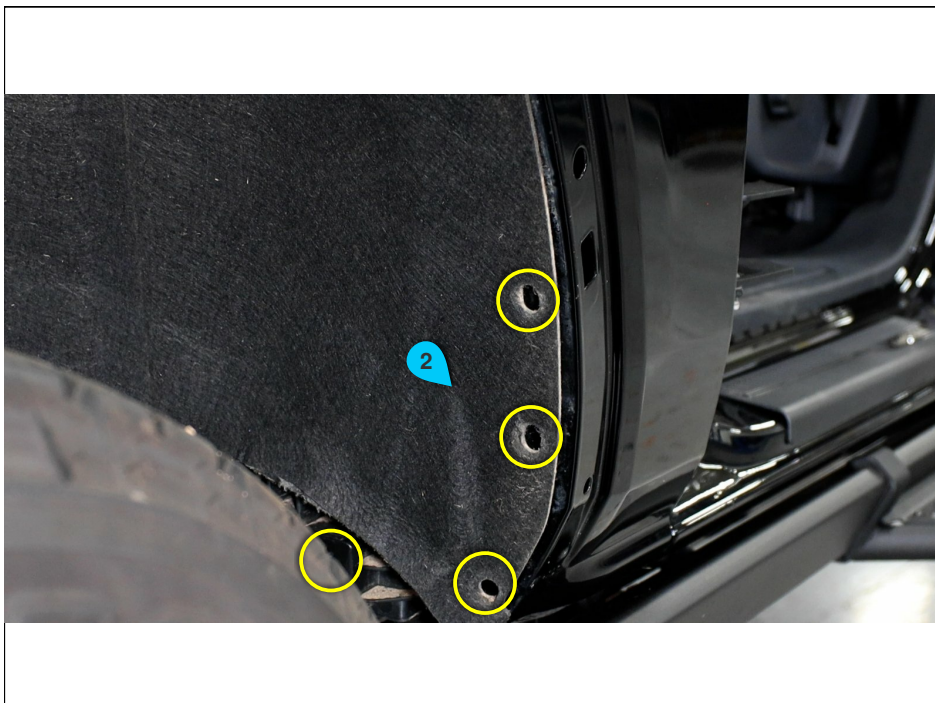

Step 5/14

Numbered annotations (1)

- 2 Remove the four factory push pins using a Phillips head screwdriver.

Step 6/14

Numbered annotations (1)


- 3 Locate two of the included snap nuts.



Step 7/14

Numbered annotations (1)

- 4 Slide the two snap nuts over the two upper holes where you removed the push pins.

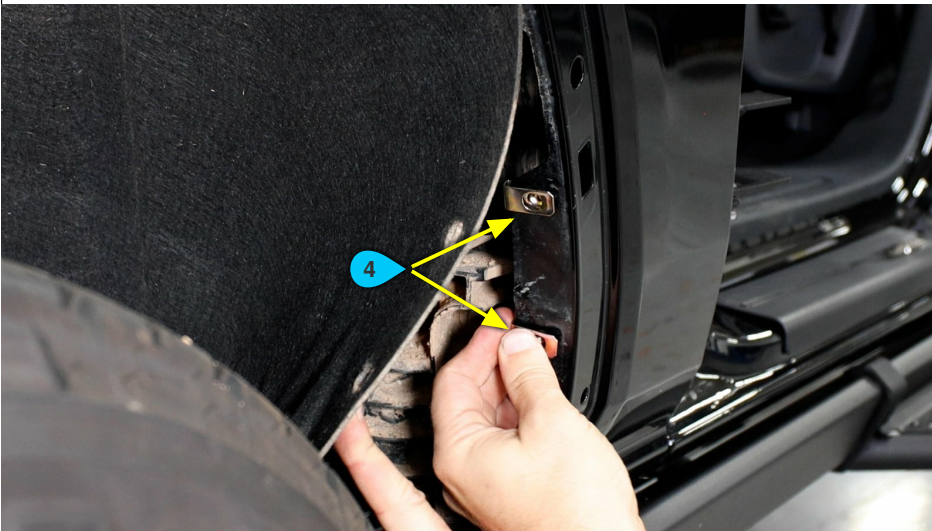




Step 8/14

Numbered annotations (1)

- 5 Locate the included mounting bracket labeled "FL".

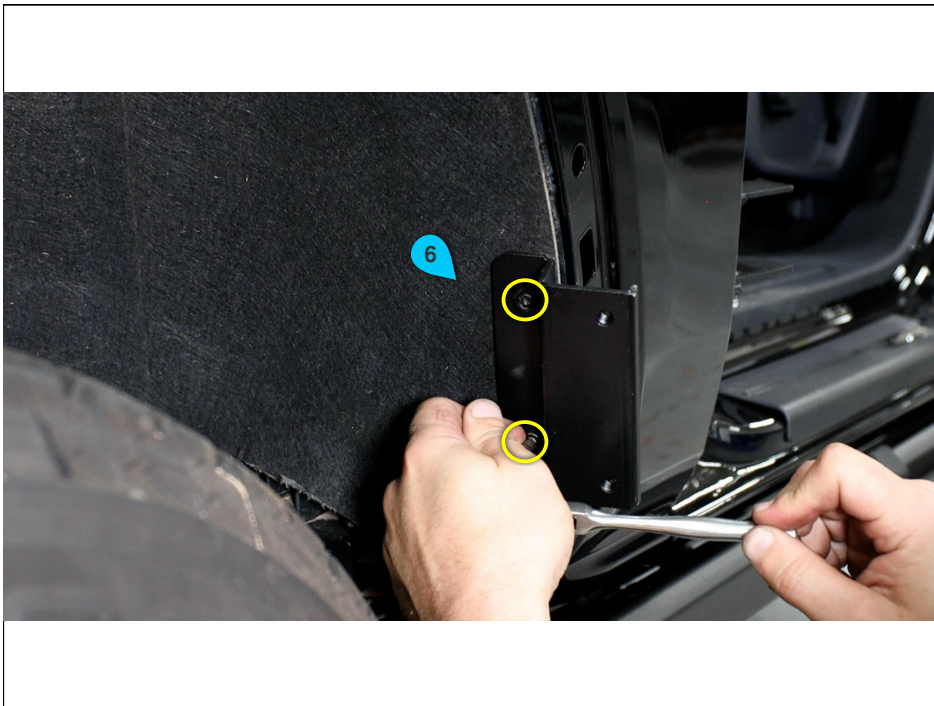

Step 9/14

Numbered annotations (1)

- 6 Install two of the included bolts and two washers to secure the bracket to the previously installed snap nuts using an M5 allen key.

Step 10/14

Numbered annotations (1)


- 7 Reinstall one of the factory push pins in the lower fender liner hole.



Step 11/14

Numbered annotations (1)


- 8 Locate the front left mud flap. Install included push pin through mudflap in inner most hole.

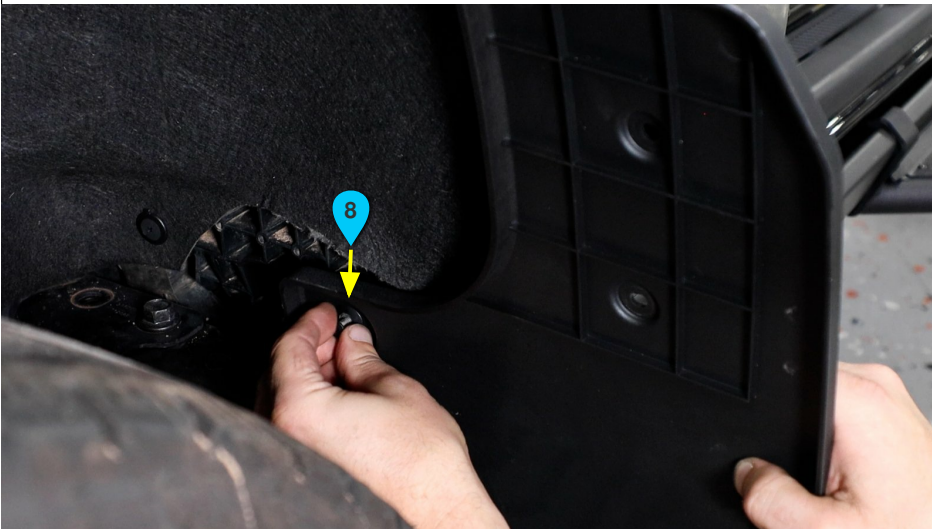

Step 12/14

Numbered annotations (1)

- 9 Install two of the included bolts and washers through mudflap into previously installed bracket by hand.

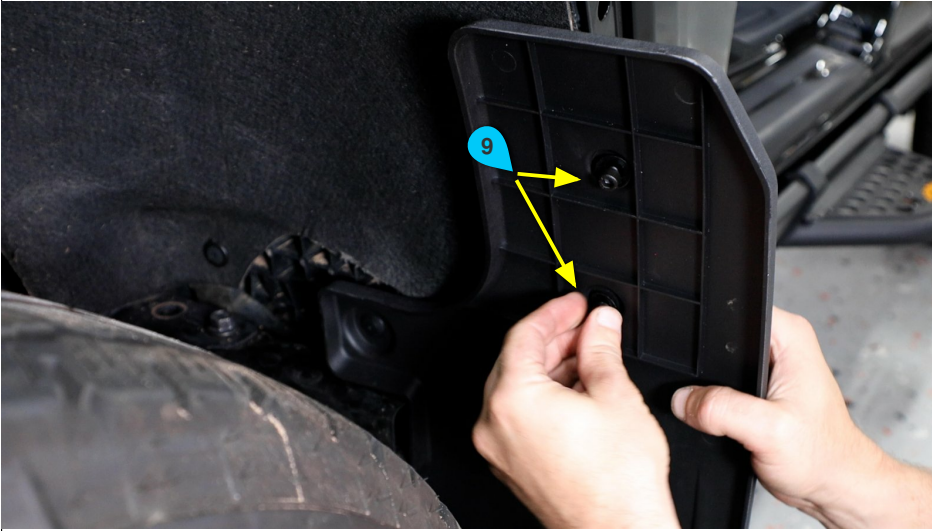

Step 13/14

Numbered annotations (1)

- 10 Tighten both bolts with M5 allen key.



Step 14/14

Numbered annotations (1)



- 11 Reinstall fender flare by turning 5 factory clips until firmly engaged. Repeat steps 1-11 for the passenger side front mud flap using the bracket marked "FR".