



INSTALLATION INSTRUCTIONS

300 W. Pontiac Way Clovis, CA 93612 toll free: 1-800-595-7016 web: www.stsuspensions.com


57420

CAMBER KIT

Adjust Camber up to 1.75 Degrees Positive or Negative

APPLICATIONS:

Chevrolet, Daihatsu, Dodge, Ford, Suzuki, Geo, Mazda, Nissan as well as most other vehicles with 12mm strut bolts.

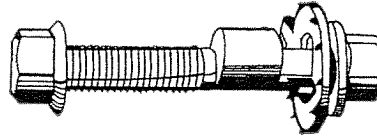

Installation of the EZ Cam (TM) XR Cam Bolts.

1. Take alignment readings and determine amount of camber change needed.
2. Raise vehicle by body pinch welds. Remove tire and wheel assembly.
3. Remove the upper strut-spindle bolt. Line up small tab with cam on bolt. Install bolt with large tab out toward wheel for positive camber or in away from wheel for negative camber. Add lock nut, snug, but do not tighten. Loosen the lower bolt.
4. Reinstall tire and wheel assembly and recompensate alignment equipment. Rotate EZ Cam XR bolt to obtain desired camber reading. Torque bolts as follows (do not exceed):
55 ft lbs (74 Nm)
5. Complete alignment and road test vehicle.