


S6169

2014-2018 DODGE RAM 1500 3.0L ECODIESEL,
3.5" FILTER-BACK SINGLE EXHAUST

MBRP®

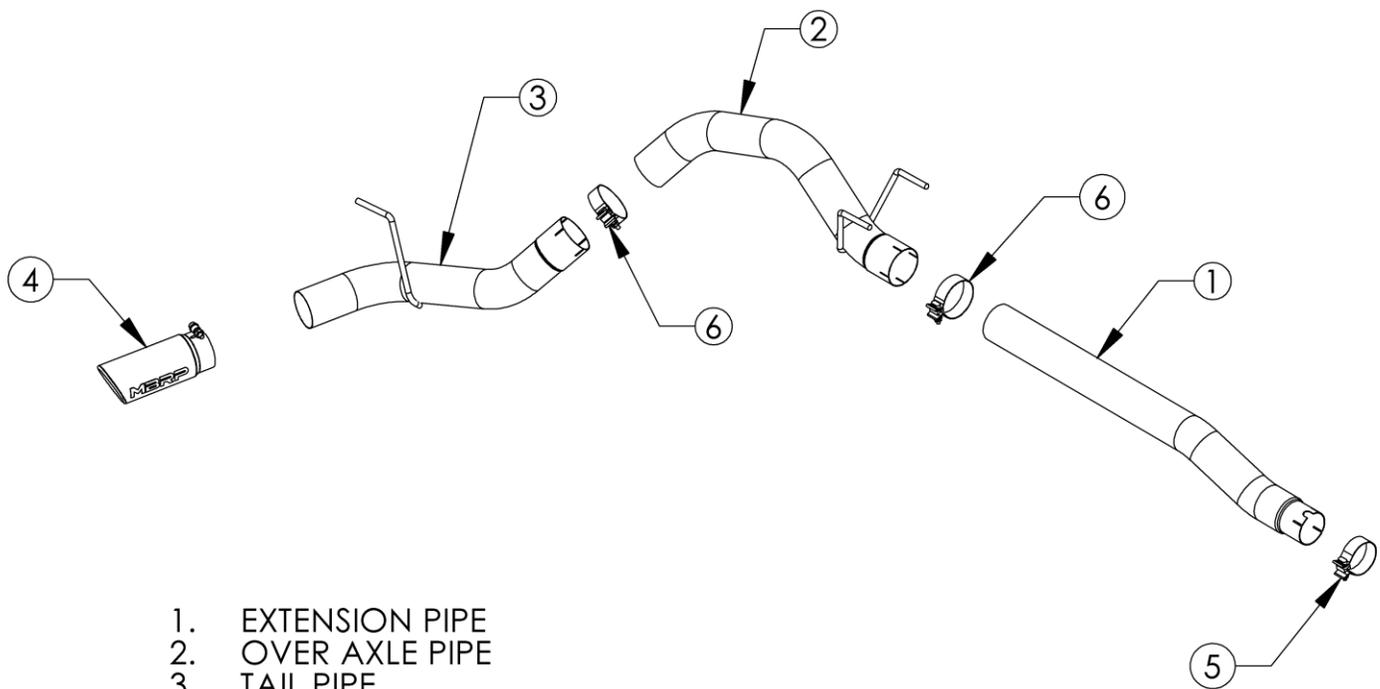

1. EXTENSION PIPE
2. OVER AXLE PIPE
3. TAIL PIPE
4. EXHAUST TIP
5. 3" BAND CLAMP
6. 3.5" BAND CLAMP

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Ltd. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP®

Removal of Stock System:



Figure 1

1. Apply some penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Loosen the nut on the band clamp located behind the particulate filter.
3. Remove the hangers from the rubber isolators on the vehicle and remove the stock muffler and tailpipe.

Installation of MBRP Performance Exhaust:



Figure 2

1. The **Extension Pipe** provided is pre-cut for the 149" wheelbase vehicle configurations. For 140" wheelbase vehicles, cut 9" off the straight end of the **Extension Pipe**.
2. Slide the **3" Clamp** over the 3" end of the **Extension Pipe** and install it onto the end of the particulate filter exhaust pipe. Line up the extension pipe slot with the locator on the top of the stock pipe. **Refer to Figure 1**. Do not fully tighten the **3" Clamp** yet.
3. Slide the **3.5" Clamp** onto the **3.5" Over Axle Pipe** and install it onto the end of the **Extension Pipe**. Install the two front **Over Axle pipe** hangers into the OEM rubber isolators.
4. Slide the **3.5" Clamp** onto the **3.5" Tail Pipe** and install it onto the end of the **3.5" Over Axle Pipe**. Remove the OEM isolator from the two hangers at the rear location and install it onto the rear hanger of the **Tail Pipe** and then slide the rear isolator back onto the stock hangers. (**Refer to Figure 2**).
5. Install the **Exhaust Tip** at the desired position. **Refer to Figure 3**
6. Tighten all hardware and clamps, starting at the front and working rearward to secure the system. Check along the full length of the exhaust system to ensure there is adequate clearance for fuel lines, vent lines, brake lines, frame, bodywork, suspension, and any wiring, etc. If there is any interference detected, relocate, or adjust to provide adequate clearance. Ensure all clamp connections are secure and components are unable to rotate or slide. Band clamps require approximately 45 lb-ft (60 N-m) of torque. Verify clearances, system security and band clamp torque after 30- 60 miles (50-100 km) of driving



Figure 3

Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your MBRP Ltd. performance exhaust system. We are confident that you will enjoy your purchase