



ORACLE LIGHTING

FORD F-150 TAIL LIGHTS

ORACLE PART #5913

INSTALLATION GUIDE

TOOLS NEEDED:
T-20 TORX BIT
8MM SOCKET
7MM SOCKET
SOCKET WRENCH



SCAN TO VIEW INSTALL VIDEO



1
USE AN 8MM SOCKET & SOCKET WRENCH TO LOOSEN THE (2) 8MM SCREWS.




2
WITH THE (2) SCREWS REMOVED, DISCONNECT THE TAIL LIGHT FROM THE TRUCK.



3
LOCATE THE FACTORY BLIS CRADLE. LOOSEN THE (4) 7MM SCREWS.



4
LOOSEN THE (2) T-20 SCREWS TO RELEASE THE BLIS SENSOR. UNPLUG THE SENSOR.

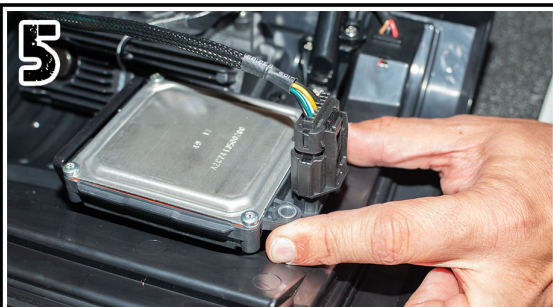

5
PLACE THE BLIS SENSOR INTO THE ORACLE TAIL LIGHT CRADLE. PLUG IN THE SENSOR.



6
TIGHTEN THE PREVIOUS (2) T-20 SCREWS FROM STEP 4 TO SECURE THE BLIS SENSOR.



7
PLUG IN THE ORACLE TAIL LIGHT INTO THE TRUCK'S FACTORY HARNESS.



8
INSTALL TAIL LIGHT BY APPLYING PRESSURE UNTIL CLIPS ARE ENGAGED. RE-INSTALL THE (2) 8MM SCREWS.