

# IMF97



## 2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS












Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** 10mm/11mm wrench, Phillips screwdriver, pick.

**Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

<b>MF97 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</b>		
<b>MUD FLAP PN: MF97 SEE PAGE 4</b>	<b>PART DESCRIPTION</b>	<b>QUANTITY</b>
MF97-LF	LEFT FRONT	1
MF97-RF	RIGHT FRONT	1
MF97-LR	LEFT REAR	1
MF97-RR	RIGHT REAR	1
<b>BRACKET PN: BMF97</b>		
BMF97-LR 	BRACKET LEFT REAR	1
BMF97-RR 	BRACKET RIGHT REAR	1
<b>HARDWARE PN: HMF97</b>		
1SP 	SPACER	2
2SS 	SCREW	2
BLKNUT 	NUT	2
HXBLT 	BOLT	2
INS5 	INSERT	4
SMWASH 	WASHER	20
SSLNUT 	LOCK NUT	4

## 2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS

**FRONT FLAP** To access interior wheel well, turn steering wheel towards installation side. **Do not fully tighten fasteners until flaps are aligned to vehicle.** Bracket/Hardware x 1 Flap → 1 x 1SP; 1 x 2SS; 2 x INS5; 4 x SMWASH

**FIGURE A** Remove factory fasteners 1 – 5, retaining screws 2, 3 & 5 for reuse.


**FIGURE B** Unscrew fastener 6 screw only, leaving anchor portion intact.

**FIGURE C** Position logo-side of flap facing rear bumper, against mounting points. Place 1SP between flap & mount 6, then install SMWASH & 2SS.



**FIGURE D/E** Install SMWASH & factory screws into mounts 2, 3 & 5 and INS5 into mounts 1 & 4.

**FIGURE F** Align flap to even ground then tighten hardware until washers are just seated.

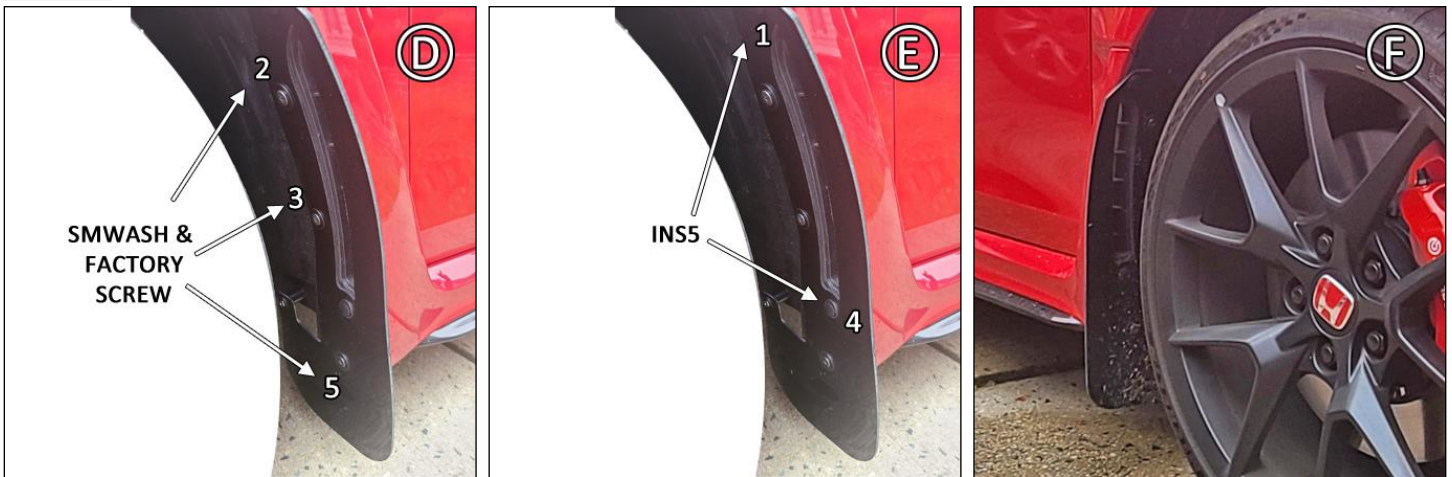


**2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS**

**REAR FLAP** Do not fully tighten fasteners until mud flap is aligned to vehicle.

Bracket/Hardware x 1 Flap → 1 x BMF97-LR/RR; 1 x BLKNUT; 1 HXBLT; 6 x SMWASH; 2 x SSLNUT

**FIGURE G** Temporarily remove and retain factory screws 1 - 3.


**FIGURE H/I** Place BMF97-LR/RR between liner & bumper skin, aligned to mounts 2 & 3. Angled section between bumper & liner, reinstall factory screw into mount 3.

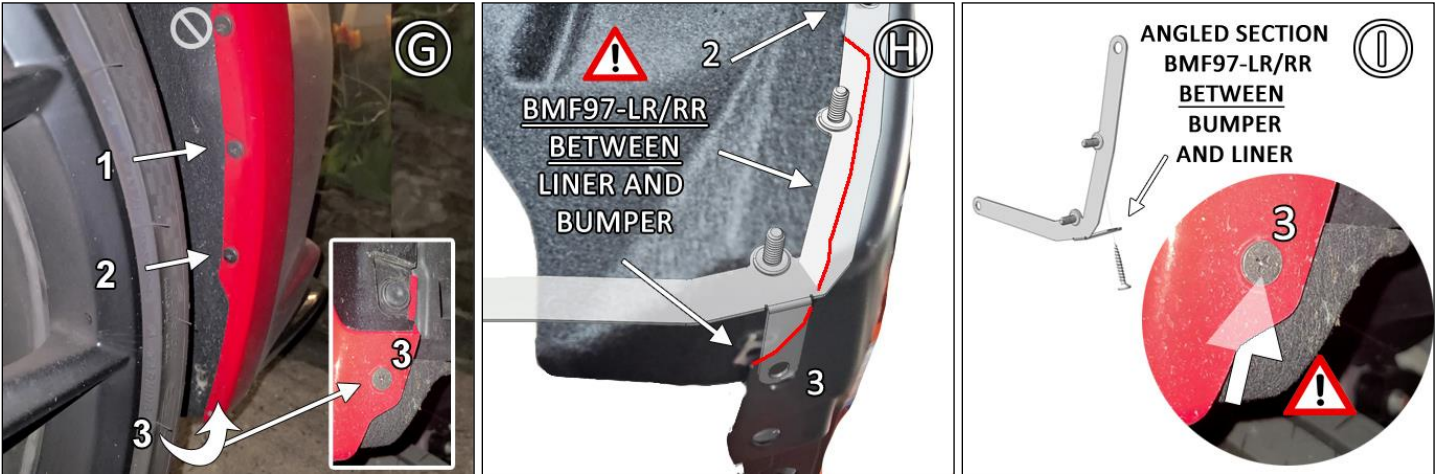

**FIGURE J** Place logo-side of flap facing rear bumper, against mounting points. Install SMWASH & factory screws into mounts 1 & 2 and SMWASH & SSLNUT into mounts 4 & 5.

**FIGURE K** Install SMWASH & HXBLT through flap/bracket mount 6. Secure with SMWASH & BLKNUT. Bend BMF97-LR/RR towards bumper if more tire clearance is required.

**FIGURE L** Align flaps to even ground before tightening fasteners until washers are just seated.

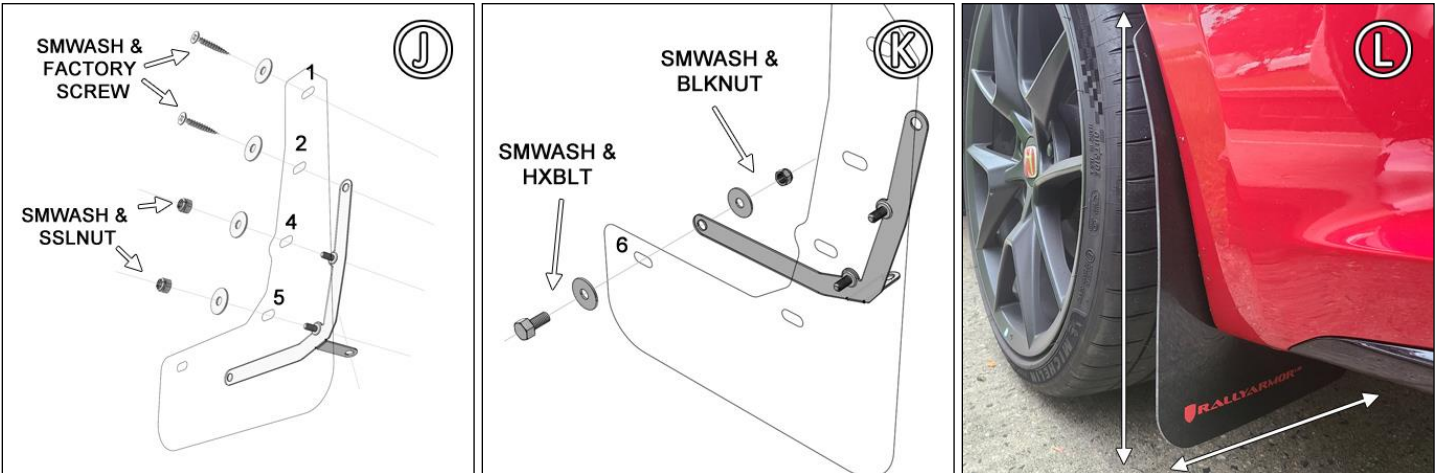

# IMF97



## 2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS

