


# Fitting Instructions

## Lower Control Arms

1. Support vehicle and disconnect ball joint, radius rod and sway bar link.
2. Remove lower control Arms
3. Press out shelled bushes from control arms.
4. Fit shelled bushes to eyes and press to swage mark on bush shank.  
**Take care to support the arm around each eye to minimise damage to arms.**
5. Lubricate end faces on bushes with grease provided and reassemble suspension as recommended in the workshop manual.

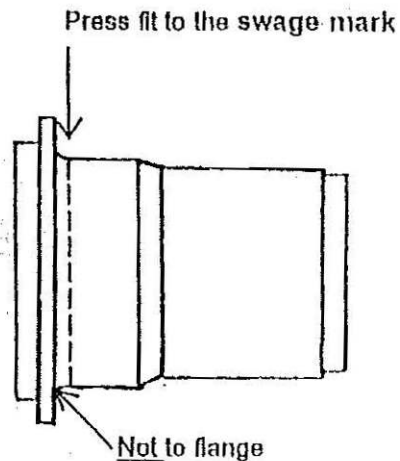


**NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON**

# Fitting Instructions

## Lower Control Arms

1. Support vehicle and disconnect ball joint, radius rod and sway bar link.
2. Remove lower control Arms
3. Press out shelled bushes from control arms.
4. Fit shelled bushes to eyes and press to swage mark on bush shank.  
**Take care to support the arm around each eye to minimise damage to arms.**
5. Lubricate end faces on bushes with grease provided and reassemble suspension as recommended in the workshop manual.

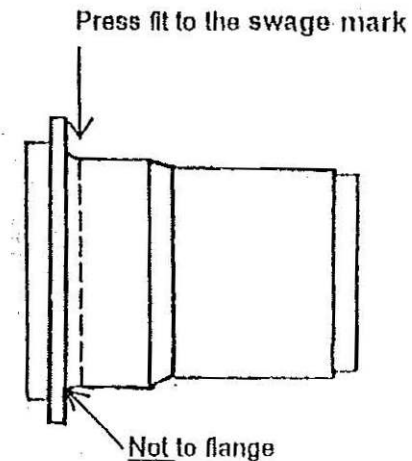

**NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON**