

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### Rubber Molle Panel Clamp Kit | Universal | 2 3/4" - 3 1/4" | 1 Clamp

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.



**SKU:**  
99070


**Tools Needed:**  
4mm Allen Wrench

**Torque Specs:**  
Hand Tighten





## INSTALLATION INSTRUCTIONS

1. Install clip nuts onto backing plates. One larger backing plate and one smaller backing plate will be used per clamp. Be sure threaded stud on clip nut is facing same direction as the tab of the backing plate. **See Photo 1.**
2. Using provided hardware, add washers to the 6mm x 30mm bolts and insert through the clamp then through the molle panel in desired mounting location. **See photo 2.**

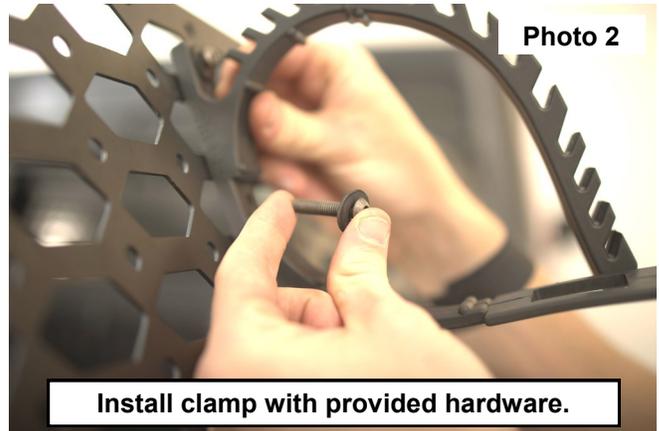

3. Insert bolts through the flat side of the clip nuts. Be sure threaded stud on clip nut and tab on backing plate are facing away from the molle panel. **See Photo 3.**
4. Tighten bolts using a 4mm Allen wrench. Do not over tighten. **See Photo 4.**

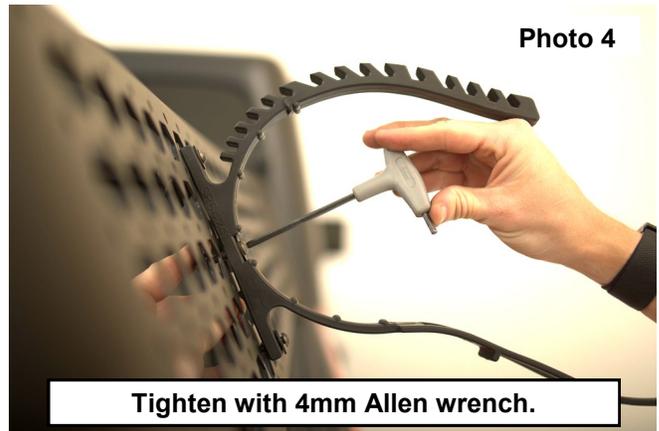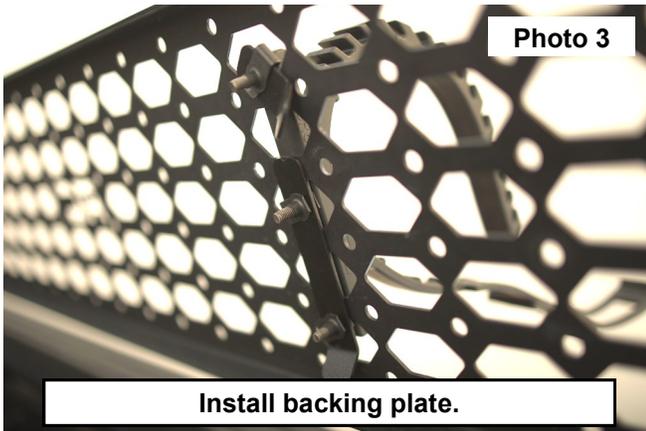

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

