

T-REX

Billet Grilles

20792

03-08 INFINITI

FX SUV

20792

03-08 INFINITI

FX SUV

BILLET INSERT

Tools Required:



Phillip Screwdriver
Slotted Screwdriver

Hardware / Parts List:

1 Billet Insert (20 Bars) **

**NOTE: Factory hardware is re-used for installation of billet grille.

Read and understand instructions before attempting installation

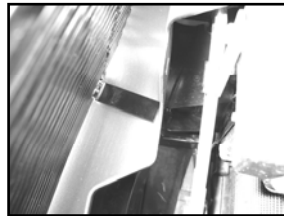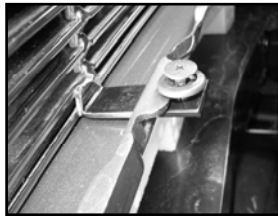

Step 1

Remove the four plastic fasteners along the top using a Phillips screwdriver. There are two black plastic retaining fasteners on each end of the grille. Use a slotted screwdriver to twist the fasteners; Pull the grille forwards and release the molded clips along the bottom of the grille. Push the grille from behind to remove. If installing a bumper billet, install the bumper billet and then go to **Step 2** below.

Step 2

Center the billet into the opening. Align the lower mounting tabs into the grille mounting holes (the outer brackets act as stops and do not fasten in place). It may be necessary to slightly bend the brackets so they align properly. Use two of the factory fasteners to secure the lower tabs. Be sure they install as shown in the picture above.



Step 3

The upper mounting tabs align to the factory mounting holes. It may be necessary to slightly bend the brackets so they align properly. Use the factory fasteners to secure the billet. Carefully check the clearance to the hood. If the billet is not aligned properly, remove the hardware and adjust the mounting tabs.

Thank you for purchasing your T-Rex billet grille.

T-Rex Truck Products Inc. 8/16/07