



# NOTICE


## ASSEMBLY OF DODGE RAMBOX™ COVER TO TRUCK




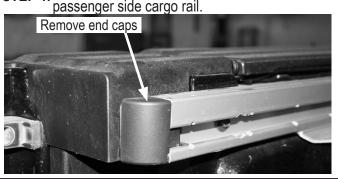

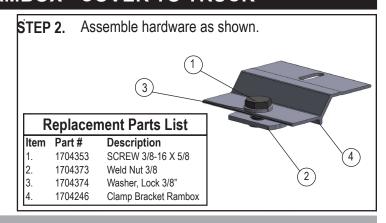


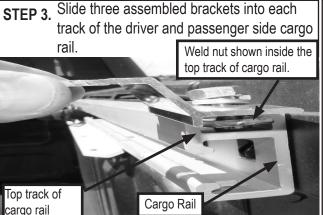

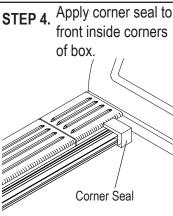


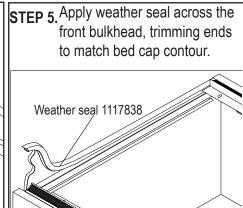

**STEP 6.** Starting from the front bulkhead of the Rambox<sup>™</sup> place brackets at the dimensions shown and then tighten. Repeat on the Driver Side.

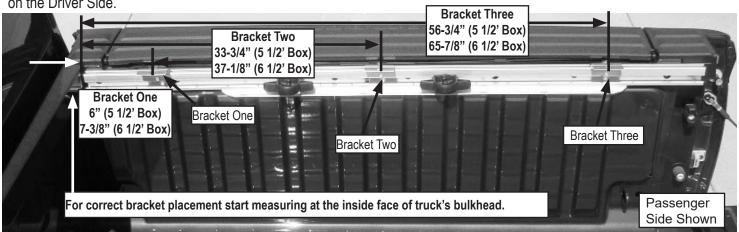

STEP 7. Fasten the cover rail to the brackets with the hardware shown.



#### Replacement Parts List


 Item
 Part #
 Description

 1.
 1706072
 SCREW 1/4-20 X 1

 2.
 1700427
 Washer 1/4

 3.
 1701543
 Nut 1/4-20

NOTE: If your rail is tilting inward or sitting to high make sure your rail is sitting beside bolt head as shown and NOT ON TOP.




#### STEP 8.

Follow steps 1 through 6 to mount the driver side rail. After the side rails are attached insert the plastic cargo rail end caps. Refer to the owners manual for instructions on how to attach the cover assembly and for other operations of the truck bed cover.

### ADDITIONAL SEALING AROUND TAILGATE

STEP 1. Apply seal 1118531 to bed caps as shown in the next two steps to help seal gap between bed cap and tailgate.


Replacement Parts List		
Item	Part #	Description
1.	1118531	EXTRUDED WEATHER SEAL_RBR_4.50

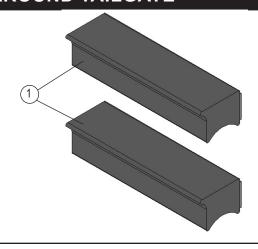

**STEP 2.** Once cover Rails are installed, clean the area shown below on Driver and Passenger side with wet rag.



STEP 3. Apply Seal on Driver and Passenger Side as shown below.

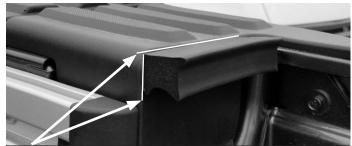

Align seal flush along the top edge of the bed cap and the inner edge as shown.