



# INSTALLATION INSTRUCTIONS

## HDX & SPORTSMAN GRILLE GUARDS

### APPLICATION:

2019 Chevrolet Silverado 1500 (Excl. 2019 Silverado LD)



### PART NUMBER:

57-3950, 57-3955, 45-3950, 40-3955

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	10MM SOCKET
2,3	2	LOWER MOUNTING BRACKET, DRIVER (2) AND PASSENGER (3)	16MM SOCKET
4,5	2	UPPER STRAP BRACKET, DRIVER (4) AND PASSENGER (5)	16MM WRENCH
6	2	LOWER SUPPORT STRAP	18MM SOCKET
7	4	SHORT M12 HEX HEAD CAP SCREW	18MM WRENCH
8	2	LONG M12 HEX HEAD CAP SCREW	FLAT HEAD SCREWDRIVER
9	6	M12 SPLIT LOCK WASHER	
10	12	M12 FLAT WASHER	HAMMER
11	6	M12 HEX NUT	UTILITY KNIFE
12	2	M10 BUTTON HEAD BOLT *	RATCHET
13	2	M10 BELLEVILLE WASHER *	TORQUE WRENCH
14	2	M10 SERRATED FLANGE NUT *	PRYBAR
15	6	M12 BUTTON HEAD BOLT *	13MM SOCKET
16	6	M12 SERRATED FLANGE NUT *	
17	6	M12 BELLEVILLE WASHER *	

**ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING**


**\*STAINLESS FOR 57-3950 & 45-3950; BLACK ZINC FOR 57-3955 & 40-3955**

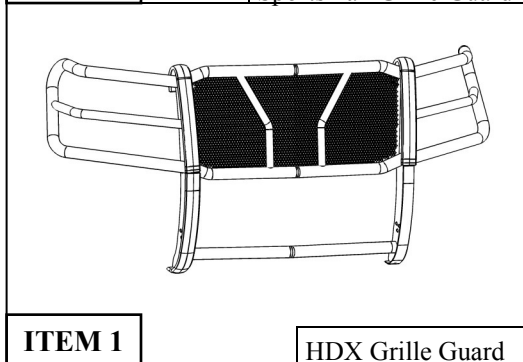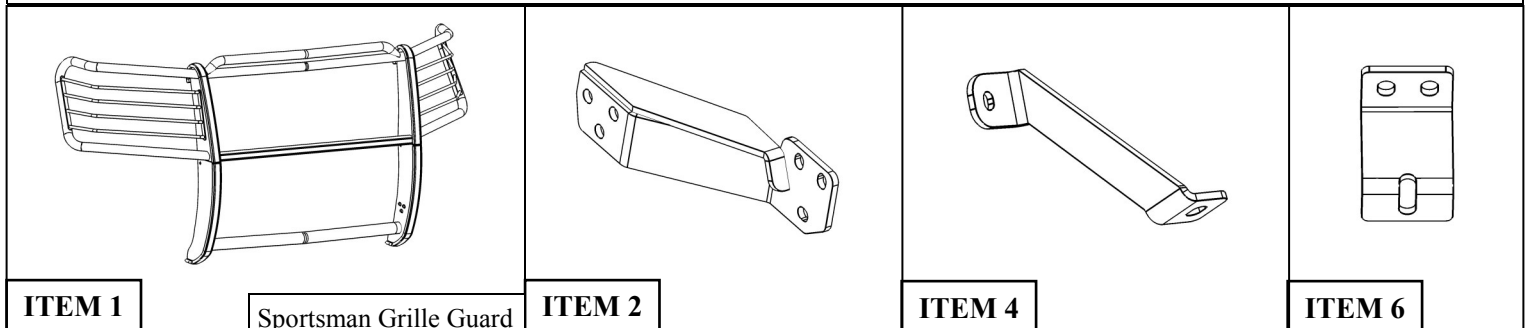



DRIVER SIDE ITEMS SHOWN;  
PASSENGER SIDE OPPOSITE

## PROCEDURE



1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.  
**Failure to identify damage before installation could lead to a rejection of any claim.**
2. Begin by removing the plastic trim fasteners holding the grille in place. Also dethatch the clips of the wings of the grille. See **Figures 1 & 2**.
3. Remove the grille by pulling firmly and carefully at the bottom of the grille.

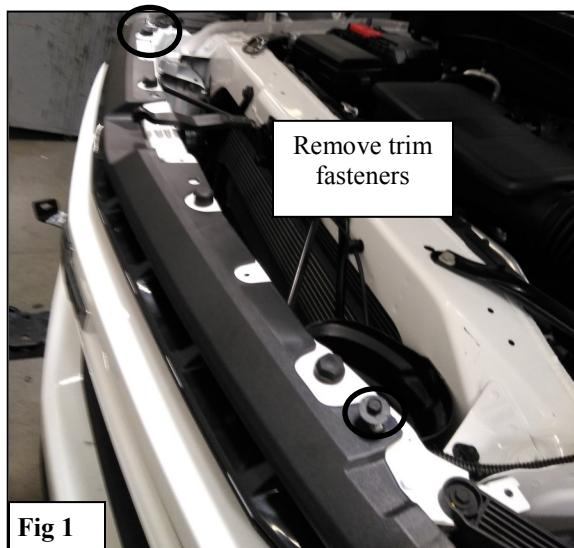



4. Use the OEM hardware to secure the Upper Strap Bracket (4-5) to the bumper. *Note: Bumper shown off vehicle for viewing purposes.* See **Figure 3**
5. Trim the factory trim area to fit the Lower Mounting Bracket (2-3). See **Figure 4**.

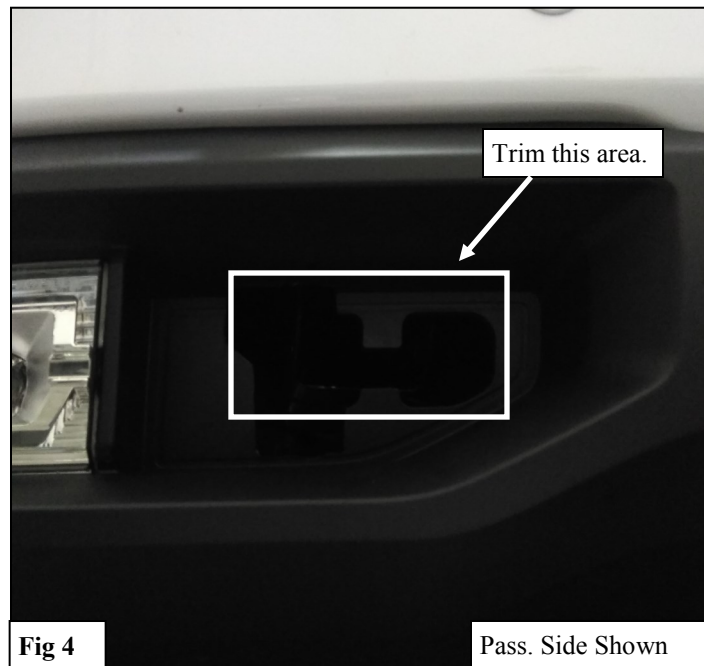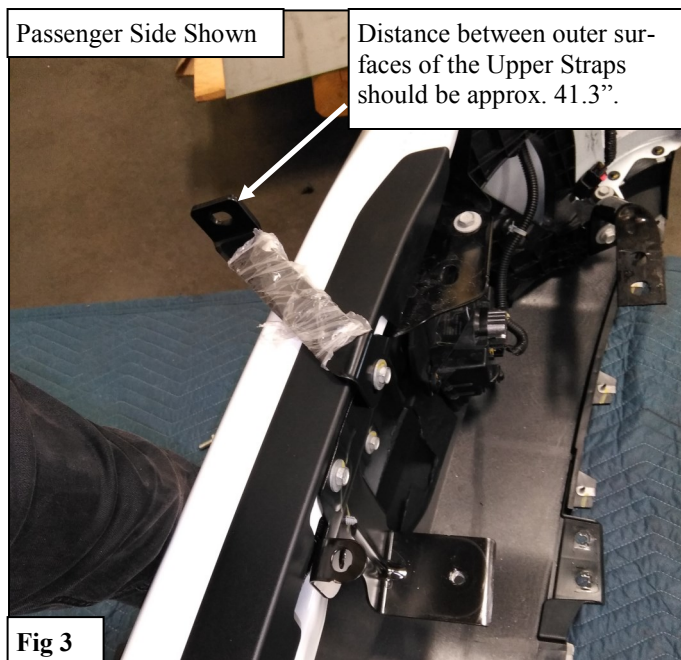

6. Install the Lower Mounting Bracket (2-3) and Lower Support Strap (6) to the frame using the supplied M12 Hardware. See **Figures 5 & 6.**

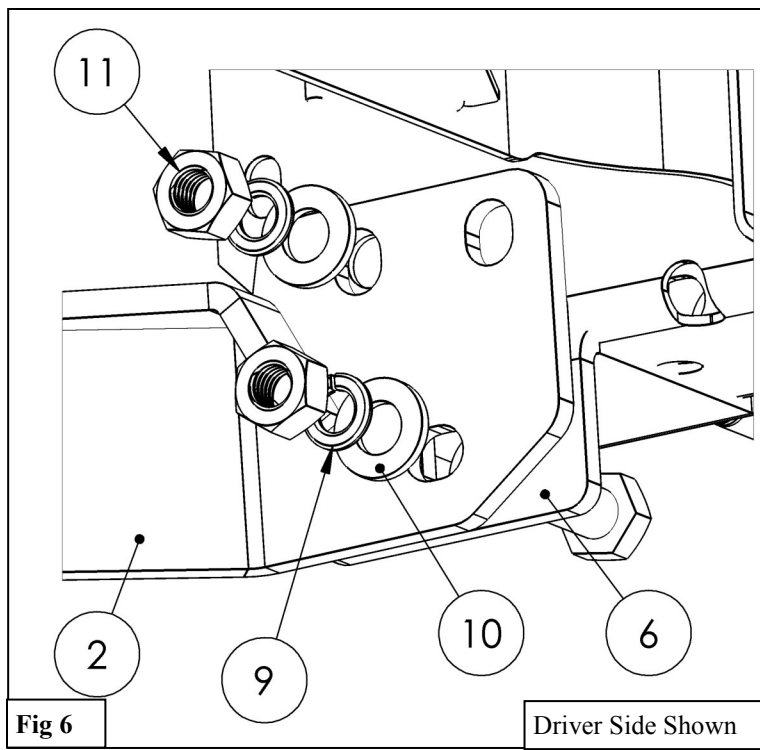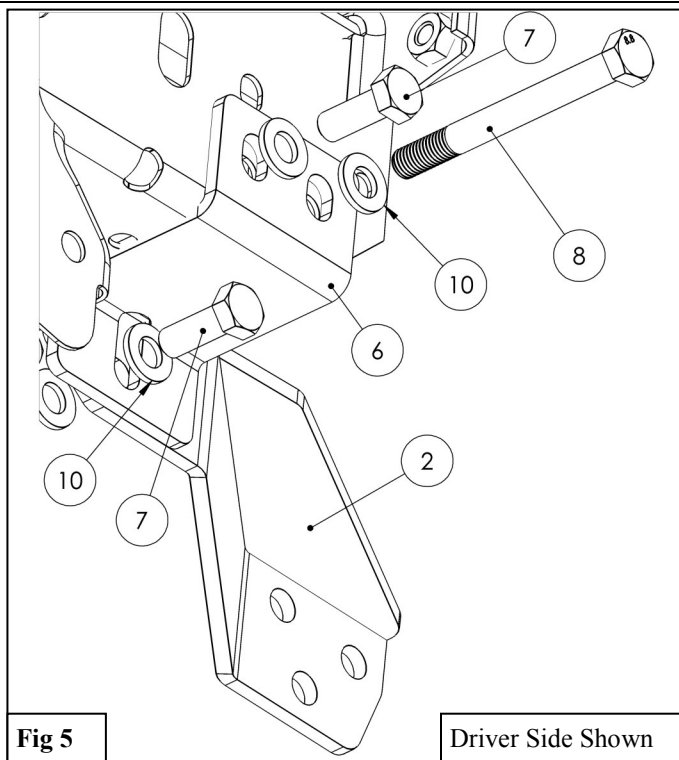


7. Repeat Steps 4-6 for the opposite sides.  
 8. Use the supplied M10 and M12 Hardware (12-17) to secure the Grille Guard to the Mounting Brackets/Straps. See **Figures 7, 8, & 9.**

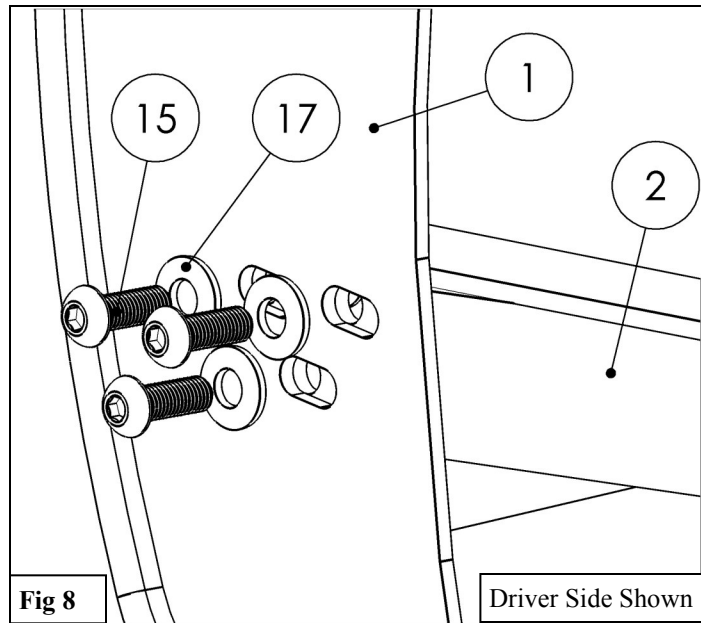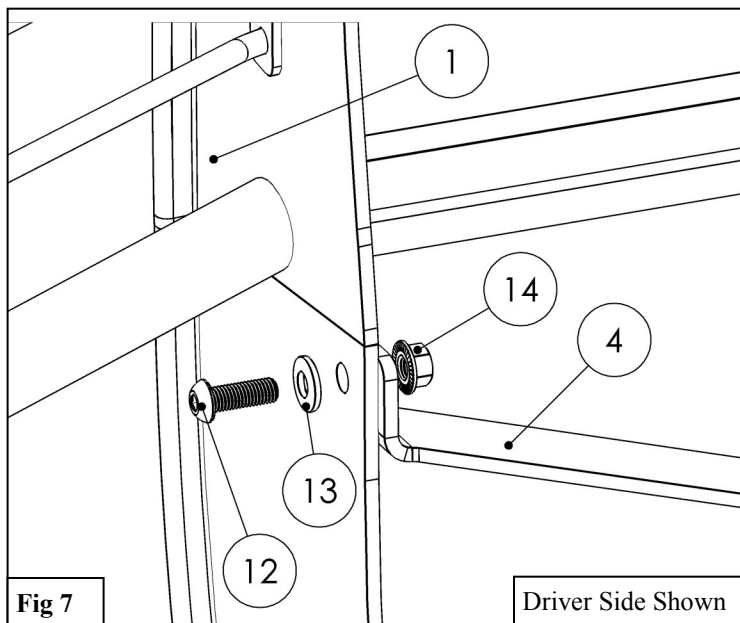



9. Adjust the Assembly as desired and tighten all hardware: M10 to 32 ft-lbs, M12 to 55 ft-lbs.

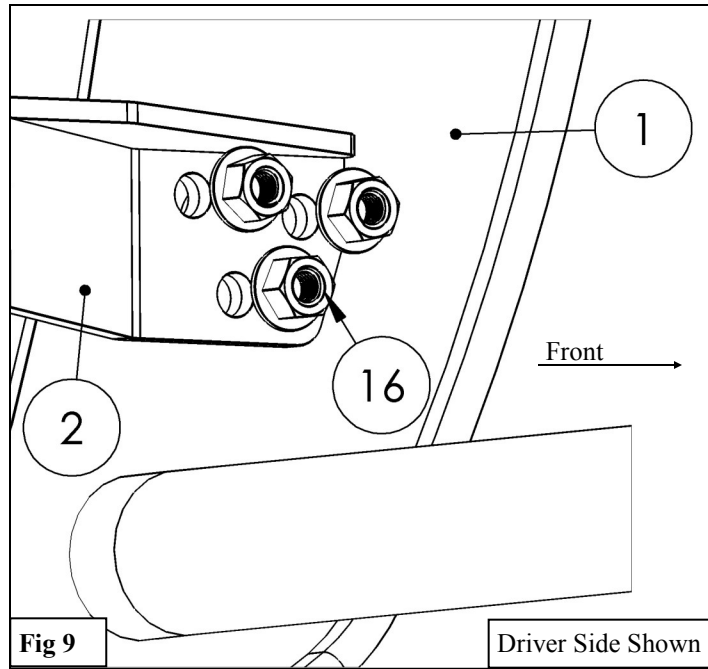

INSTALLATION COMPLETE



Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)



## WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

### FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

### DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### EYE PROTECTION:

**ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.**

### MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov)



Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773