

INSTALLATION INSTRUCTIONS

TRANSMISSION PAN SKID PLATE


APPLICATION:

2018-2019 Jeep Wrangler JL 2 Dr/Wrangler JL Unlimited 4 Dr (Excl. 2018 JK)

PART NUMBER:

42-21075

CONTENT					
ITEM	QUANTITY	DESCRIPTION			TOOLS NEEDED
1	1	REAR SKID PLATE SECTION			10MM SOCKET
2	1	FRONT SKID PLATE SECTION			10MM WRENCH
3	1	BRACKET A			13MM SOCKET
4	1	BRACKET B			13MM WRENCH
5	1	BRACKET C			16MM SOCKET
6	2	M10 NUT PLATE			RATCHET
7	2	M10 HEX HEAD BOLT			TORQUE WRENCH
8	2	M10 FLAT WASHER			
9	2	M10 SPLIT LOCK WASHER			
10	4	M8 SPLIT LOCK WASHER			
11	4	M8 HEX HEAD BOLT			
12	4	M8 FLAT WASHER			
13	4	M8 SERRATED FLANGE NUT			
14	4	M6 HEX HEAD BOLT			
15	4	M6 FLAT WASHER			
16	4	M6 SPLIT LOCK WASHER			
ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING					
		WESTIN			
ITEM 1		ITEM 2	ITEM 3	ITEM 4	ITEM 5




P.N.: 75-4221075-RevA ECO #: W18-0138

PROCEDURE


 Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.


Failure to identify damage before installation could lead to a rejection of any claim.

2. Begin by removing the 4 bolts from the Transmission Pan as shown in Figure 1.

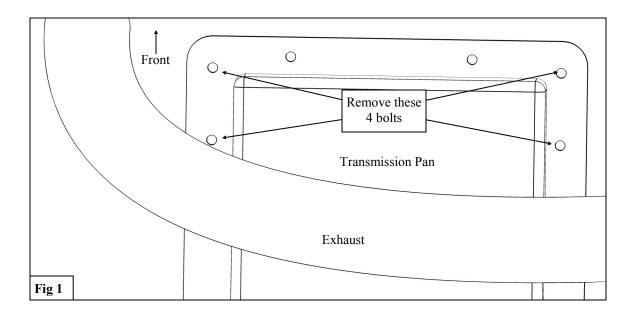


- 3. Loosely install Brackets A & B (3,4) using the supplied M6 Hardware in the driver side bolt locations shown in **Figure 1**. See **Figure 2**.
- 4. Loosely install Bracket C (5) using the supplied M6 Hardware in the passenger side bolt locations shown in **Figure 1**. See **Figure 3**.

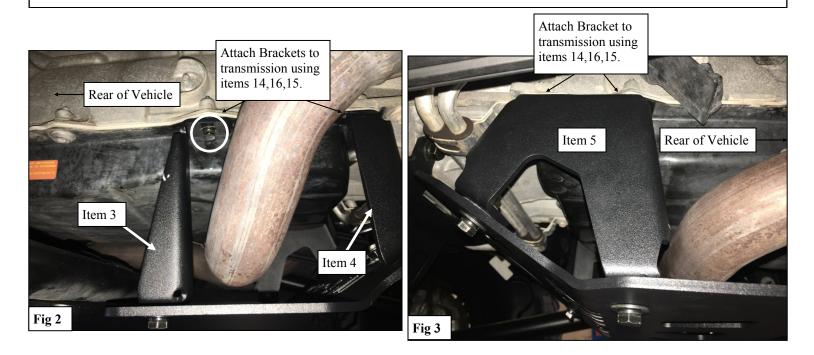




Thank you for choosing Westin products for additional installation assistance please call Customer Service (800) 793-7846 www.westinautomotive.com DATE: 01/31/19 5. Install the Front Skid Plate Section (2) to the previously installed brackets using the supplied M8 Hardware. See Figure 4.

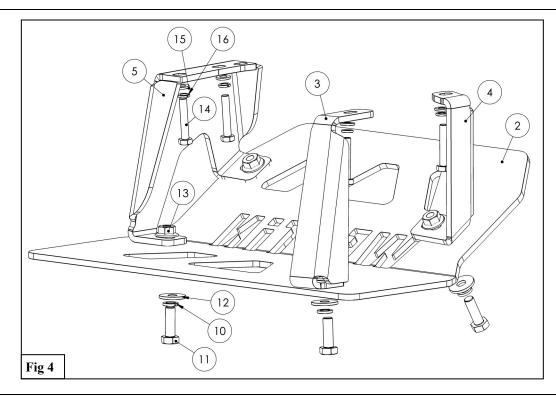

- 6. Insert the supplied Nut Plates (6) into the cross member shown in Figure 5.
- 7. Install the Rear Skid Plate Section (1) using the supplied M10 Hardware and OEM Hardware. See Figure 6.
- 8. Adjust the skid plates as necessary and torque all hardware as specified: M6 to 7 ft-lbs, M8 to 18 ft-lbs, M10 to 38 ft-lbs.

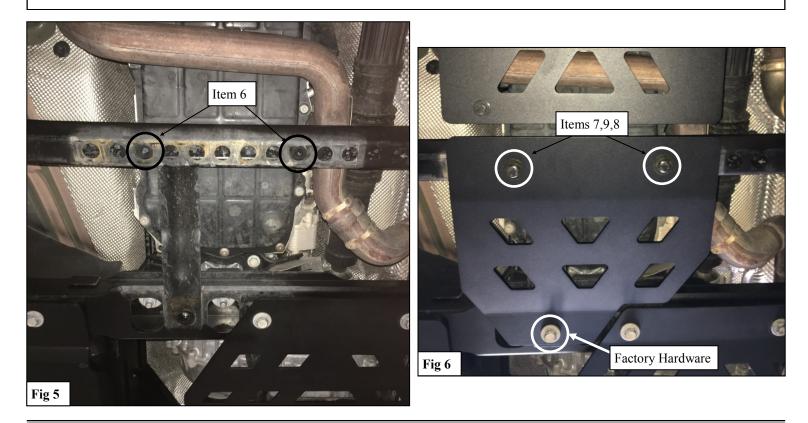




Westin Automotive Products, Inc. 320 W. Covina Blvd San Dimas, Ca. 91773

Thank you for choosing Westin products for additional installation assistance please call Customer Service (800) 793-7846 www.westinautomotive.com DATE: 01/31/19

INSTALLATION COMPLETE

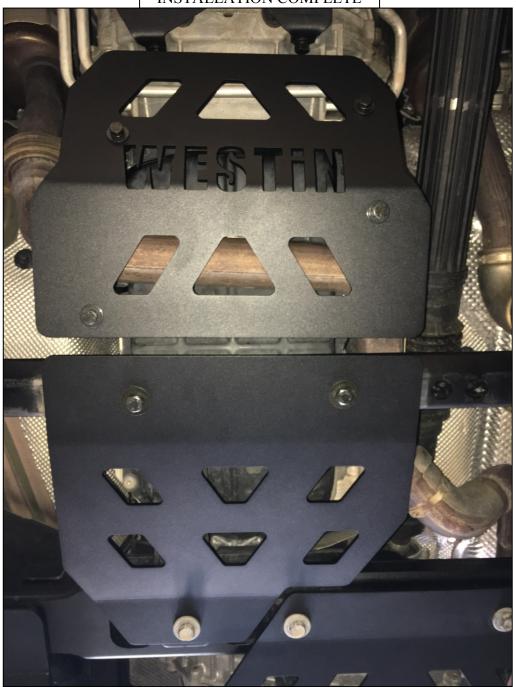

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER

WESTIN ^W ³²

Westin Automotive Products, Inc. 320 W. Covina Blvd San Dimas, Ca. 91773 Thank you for choosing Westin products for additional installation assistance please call Customer Service (800) 793-7846 www.westinautomotive.com DATE: 01/31/19





WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE. AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc. San Dimas, Ca. 91773